
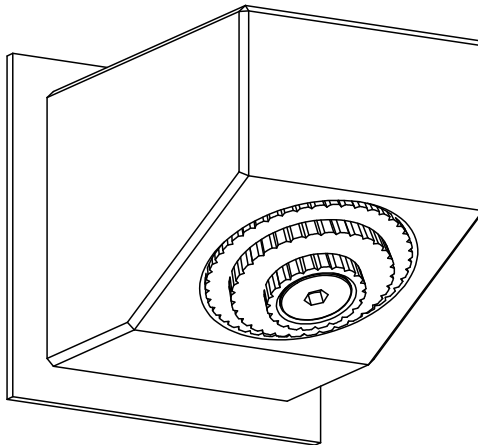
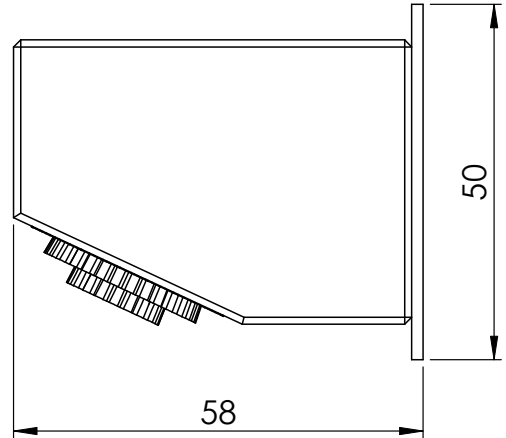


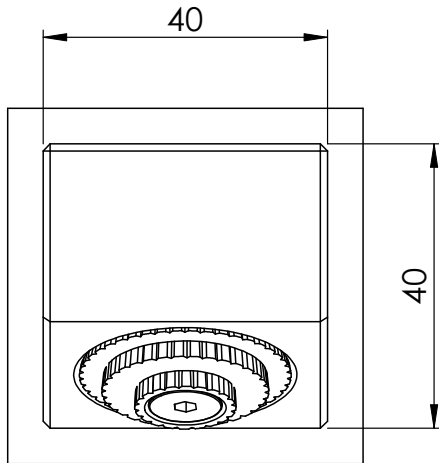

UNLESS OTHERWISE SPECIFIED: DIMENSIONS ARE IN MILLIMETERS SURFACE FINISH: TOLERANCES: LINEAR: ANGULAR:				FINISH: Machined/Linished		DEBUR AND BREAK SHARP EDGES		DO NOT SCALE DRAWING		REVISION	
								© Rainware Pty Ltd 2012			
								TITLE: S/S Rainware Rose			
								DWG NO.			
								A4			
								SHEET 1 OF 1			

NAME	SIGNATURE	DATE					
DRAWN	Stevan Balfour						
CHK'D							
APPV'D							
MFG	Rainware Pty Ltd						
Q.A.							
				MATERIAL: 316 Stainless Steel			
				WEIGHT:			

ABN: 96 640 055 079 ACN: 134 925 705

Unit 1 9 Newing Way
Caloundra Qld Australia 4551
Phone : 0754 926 200
Fax : 0754 926 788
Mobile Phone : 0411 660 933
Email: admin@rainware.com.au
Web Site: www.rainware.com.au

Rainware Shower Rose Installation Instructions

1. Clean ½" BSP Male thread of all dirt & old thread tape, flush pipe work, reapply new thread tape about 6-10 turns.
2. Screw on shower rose base(with o'ring) until tight, carefully not to damage the flow regulator disc inside. Apply o'ring lubricant to o'ring if required.
3. Test for leaks.
4. Slide on Stainless Steel Rose onto base, position and tighten grub screw with Allen key provided.

Note:

Some instantaneous hot water heaters will not work with flow rates below 9 litres per minute. Check with the manufacturer of the hot water system prior to installation.

Performance:

The Shower rose will operate at the designed flow rate as shown on the WELS Label within the minimum pressure of 150 KPA to Maximum pressure range 500 KPA.



Thank you for purchasing a Rainware Product.