
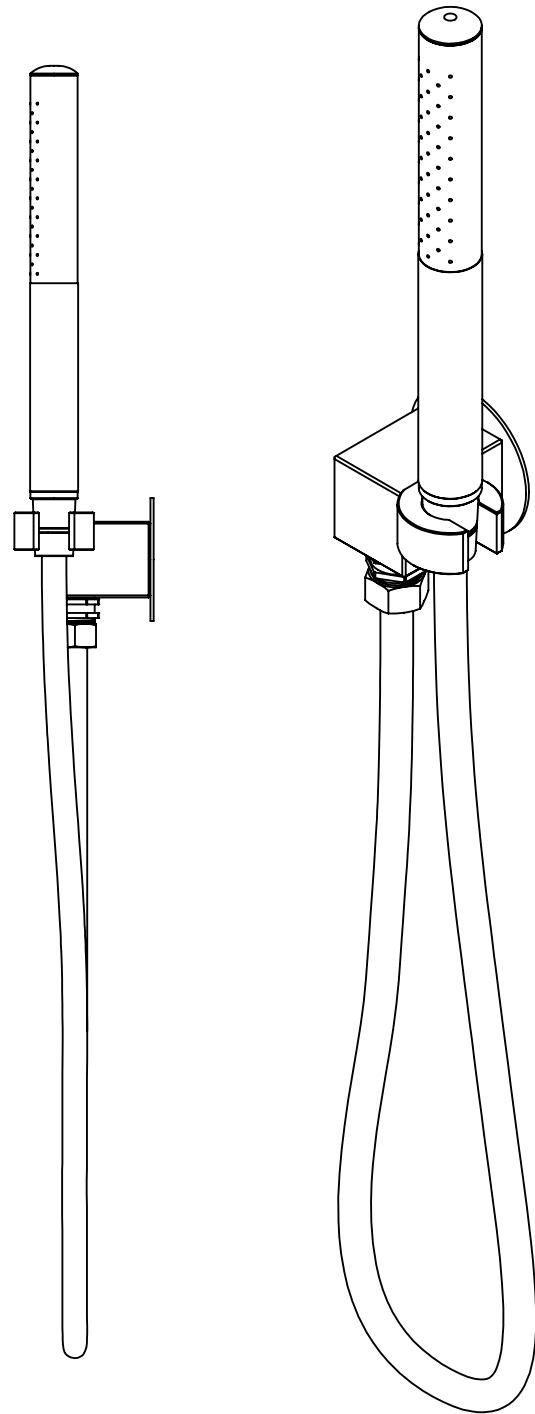


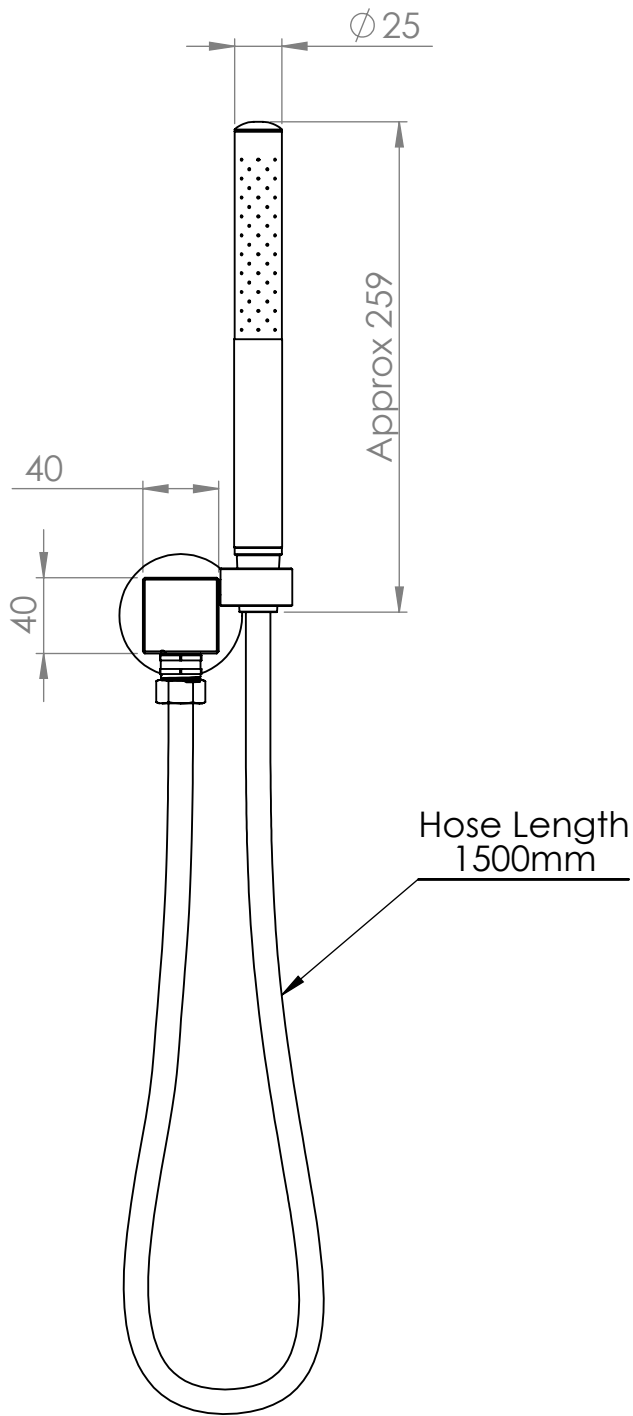

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN MILLIMETERS
SURFACE FINISH:
TOLERANCES:
LINEAR:
ANGULAR:

FINISH:
• Polished
• Mill

DEBUR AND
BREAK SHARP
EDGES

DO NOT SCALE DRAWING

REVISION

© Copyright Rainware 2015

NAME	SIGNATURE	DATE			
DRAWN	Stevan Balfour	22/3/16			
CHK'D					
APPV'D					
MFG	RAINWARE Pty Ltd				
Q.A					
			MATERIAL:		
			• 316 Stainless Steel		
			• Acetal		
			WEIGHT:		

TITLE:

Castaway
Hand Shower

DWG NO.

8015

A4

SCALE: Not To Scale

SHEET 1 OF 1

ABN: 96 640 055 079 ACN: 134 925 705

Unit 1 9 Newing Way
Caloundra Qld Australia 4551
Phone : 0754 926 200
Fax : 0754 926 788
Mobile Phone : 0411 660 933
Email: admin@rainware.com.au
Web Site: www.rainware.com.au

Castaway Handshower Installation Instructions

1. Clean ½" BSP Male thread of all dirt & old thread tape, flush pipe work, reapply new thread tape about 6-10 turns.
2. Slide on cover plate then screw on brass shower rose base (with O'ring) until tight, carefully not to damage the flow regulator disc inside. Apply O'ring lubricant to O'ring if required.
3. Test for leaks.
4. Push on stainless steel wall elbow onto base, position and tighten grub screw with Allen key provided.
5. Attach flexible hose as per drawing to Wall elbow and conical end to handpiece.
6. Test for Leaks.

Note:

Some instantaneous hot water heaters will not work with flow rates below 9 litres per minute. Check with the manufacturer of the hot water system prior to installation.
Flexible hose is not designed to be over stretched or for use without the elbow, doing so may damage the hose and void warranty.

Performance:

The Shower rose will operate at the designed flow rate as shown on the WELS Label within the minimum pressure of 150 KPA to Maximum pressure range 500 KPA.



Thank you for purchasing a Rainware Product.