


Circa Vertex Wall basin set

SUSSEX

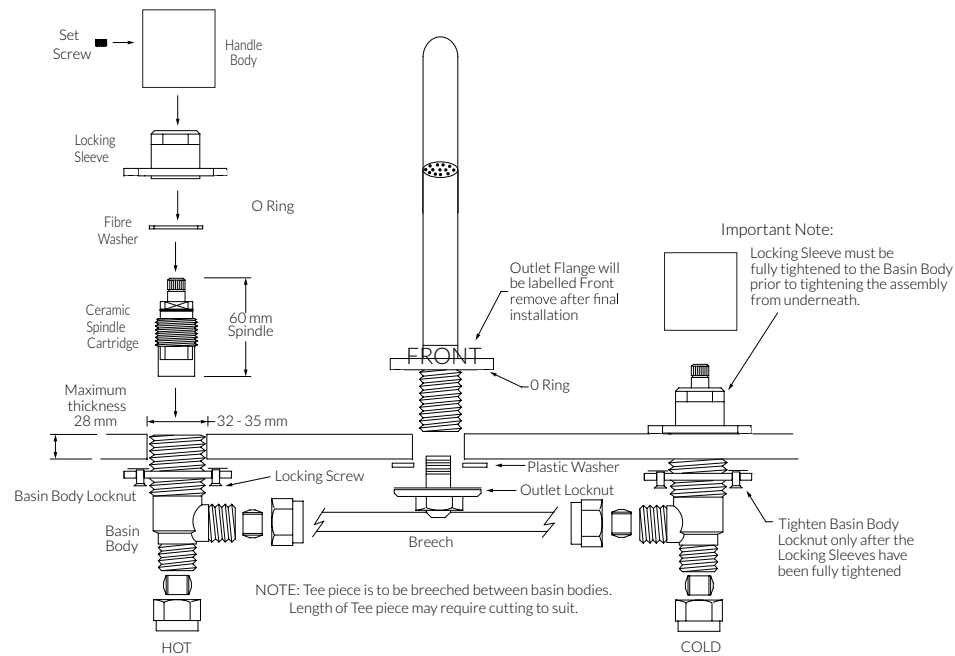

Product code

RWBS150	Wall basin set 150mm	RWBS150-V	Wall basin set 150mm - Vertex
RWBS200	Wall basin set 200mm	RWBS200-V	Wall basin set 200mm - Vertex
RWBS250	Wall basin set 250mm	RWBS250-V	Wall basin set 250mm - Vertex

Installation guidelines

- The Spindles will be supplied fitted into the Basin Bodies when supplied.
- Determine the distance of the Basin/Hob holes and cut the breech to suit.
- Place the Outlet Locknut and Plastic Washer over the outlet fitting of the Breech.
- Align the breached Basin Bodies and fit through the mounting surface.
- Fit the Fibre Washer over the spindles.
- Raise the assembled Basin Body through the mounted surface and fit the Locking Sleeves.
- Fully tighten Locking Sleeves and ensure O Ring is intact before lowering assembly onto mounting surface. (See Fig.1)
- Working from underneath tighten the Basin Body Locknut to secure the assembly.
- Outlet must be secured with the FRONT label facing the user.
- Remove label after final installation.
- Fit the Outlet to Breech and secure by tightening the locknut, ensure O Ring is intact.
- Once all parts are tightened fit Handle and secure with Set Screw using Allen Key.
- Connect Hot and Cold feed lines to the Basin Bodies.
- Check all parts, fittings and connections for any water leaks.

Fig.1

