


MEISTERSTÜCK


ASYMMETRIC DUO

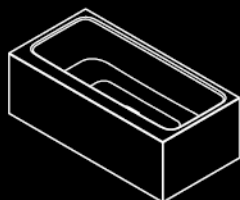

CENTRO DUO OVAL




CONODUO

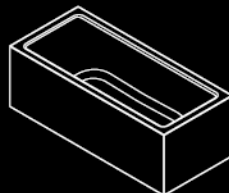

EMERSO



INCAVA

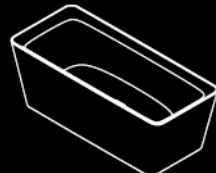

CLASSIC DUO OVAL



2



DE Montageanleitung | EN Installation instructions

NL Montagehandleiding | FR Instructions de montage | IT Istruzioni di montaggio
 ES Instrucciones de montaje | PT Instruções de montagem | DA Monteringsvejledning
 NO Monteringsanvisning | SV Monteringsanvisning | FI Asennusohje | ET Paigaldusjuhised
 LV Montāžas instrukcija | LT Montavimo instrukcija | PL Instrukcja montażu | CS Návod k montáži
 RU Инструкция по монтажу | UK Інструкція з монтажу | SK Návod na montáž | HU Összeszerelési utasítás
 RO Instrucțiuni de montare | SL Navodila za montažo | HR Upute za montažu
 BG Ръководство за монтаж | EL Οδηγίες συναρμολόγησης | TR Montaj talimatı | AR بيكرتلا ليلد
 ZH 安装说明书 | JA 設置説明書 | KO 조립설명서 | ID Petunjuk perakitan | TH คำแนะนำในการติดตั้ง
 VI Hướng dẫn lắp ráp | HI स्थापना निर्देश


1.



2.

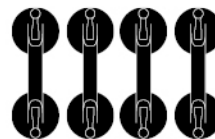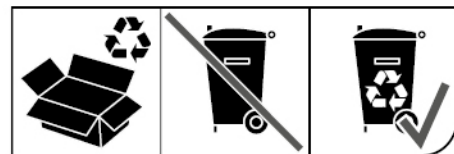


13 KBW 001



ASYMMETRIC DUO

1740

1742

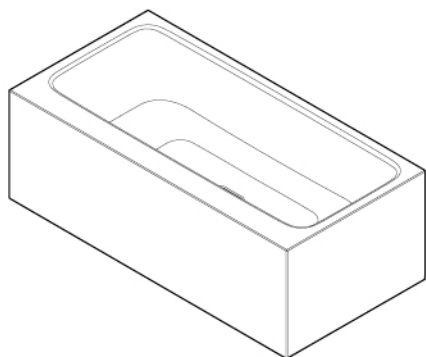

CENTRO DUO OVAL

1127


1128




CONODUO

1732


1733

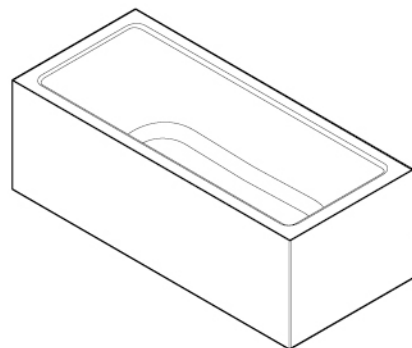




EMERSO

1100

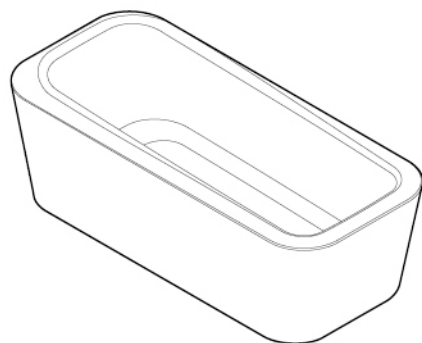

INCAVA

1174

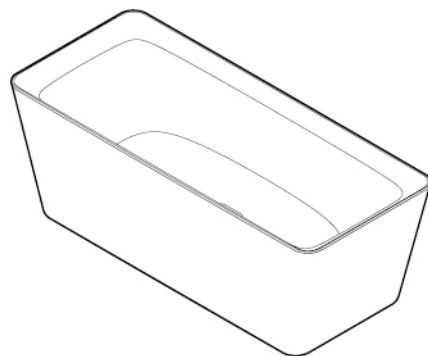

MEISTERSTÜCK

CLASSIC DUO OVAL

1111

1113

1112



616202

616201




616102

616101







A

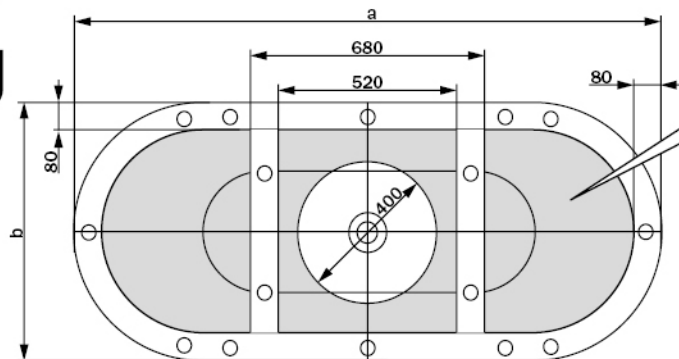




	a mm	b mm	r mm
1740	1700	800	-
1742	1800	900	-
1127	1700	750	375
1128	1800	800	400
1732	1700	750	-
1733	1800	800	-
1100	1600	710	200
1174	1493	643	80
1113	1418	643	321,5
1111	1518	693	346,5


Inch = mm x 0,0394

B

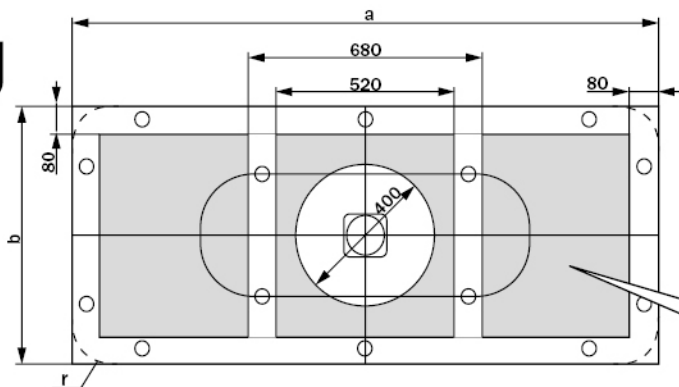


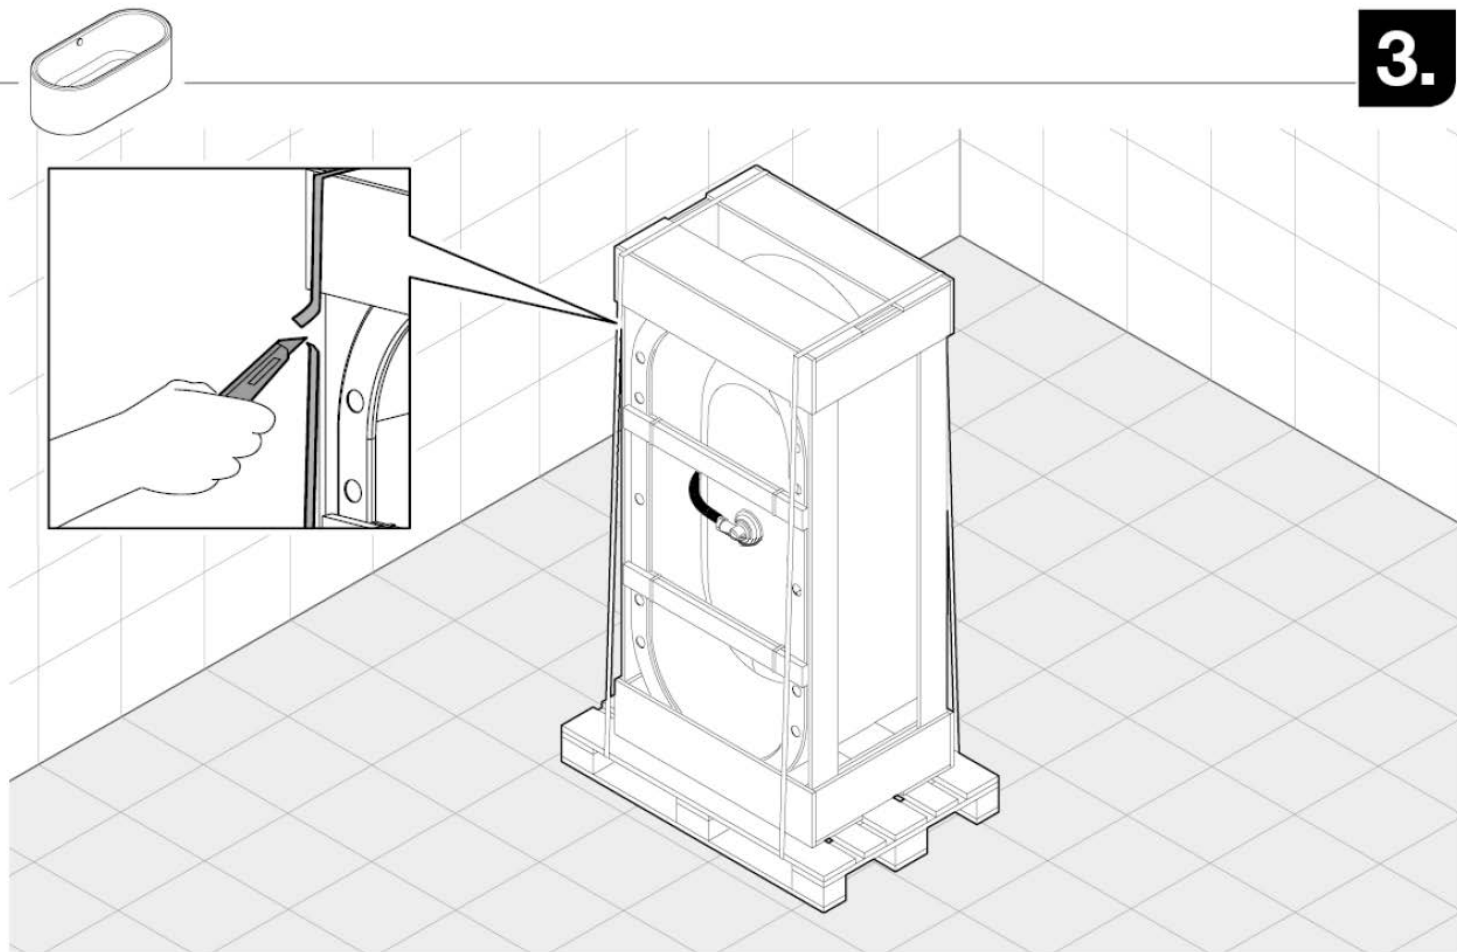


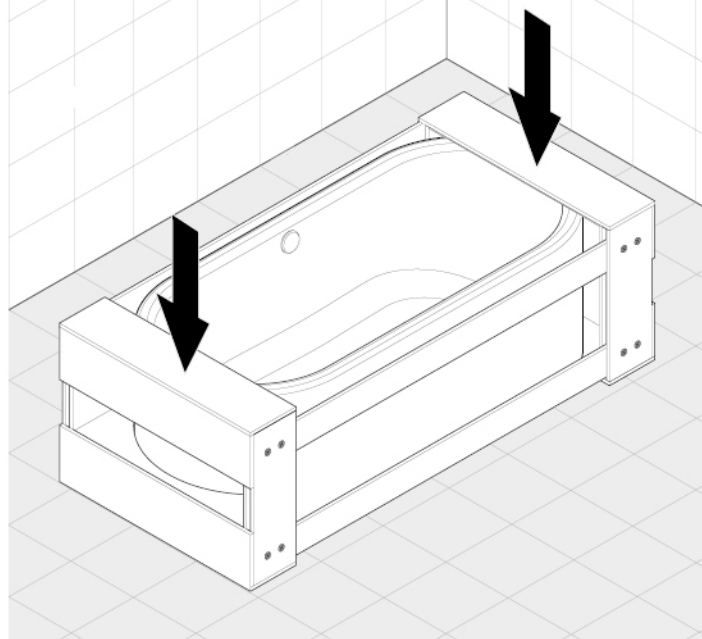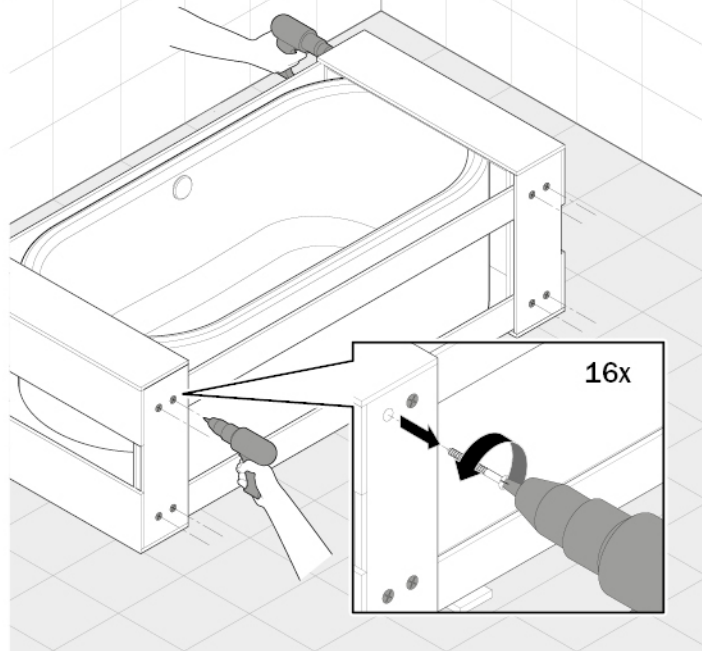**4.****5.**

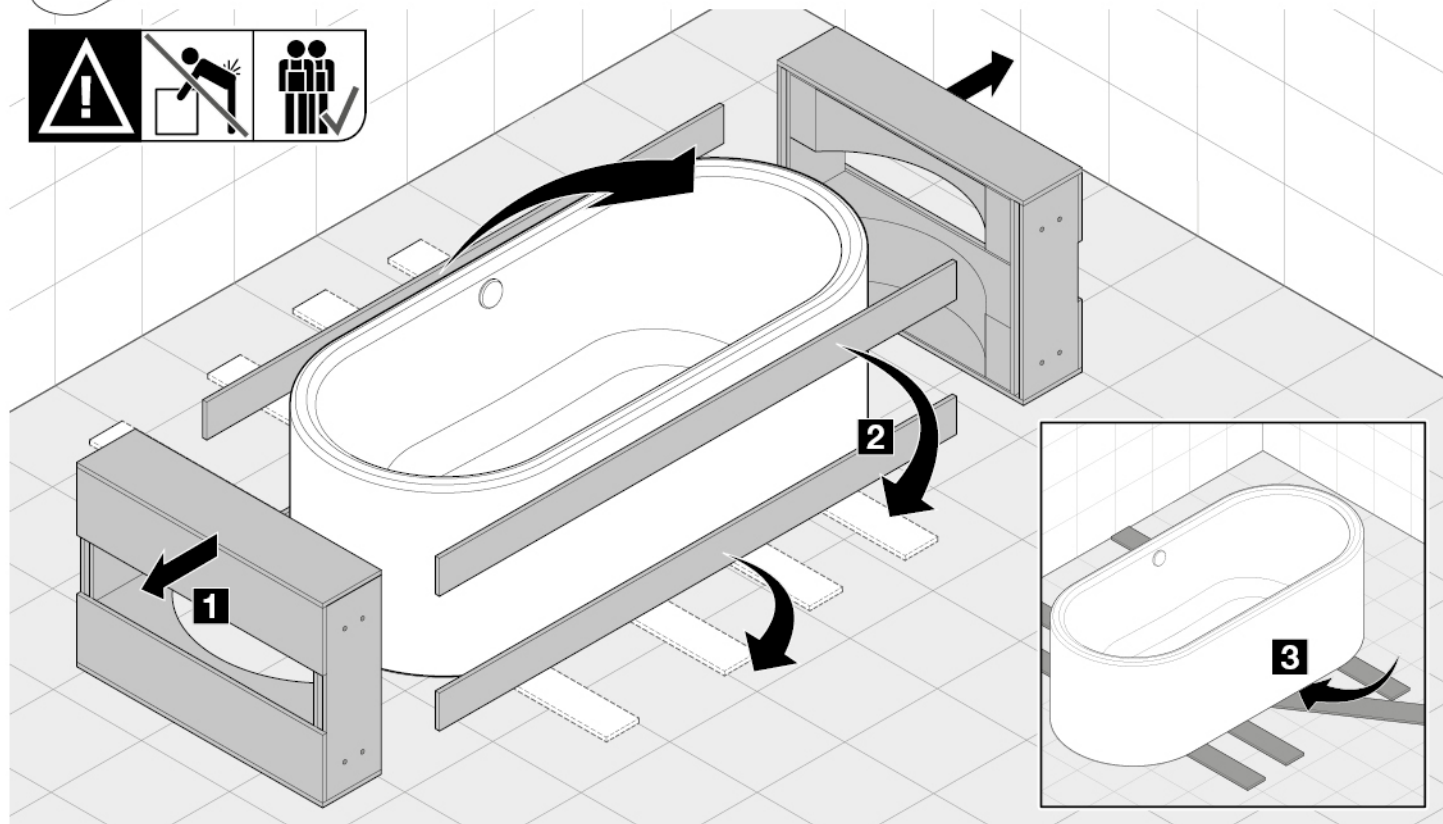


7.

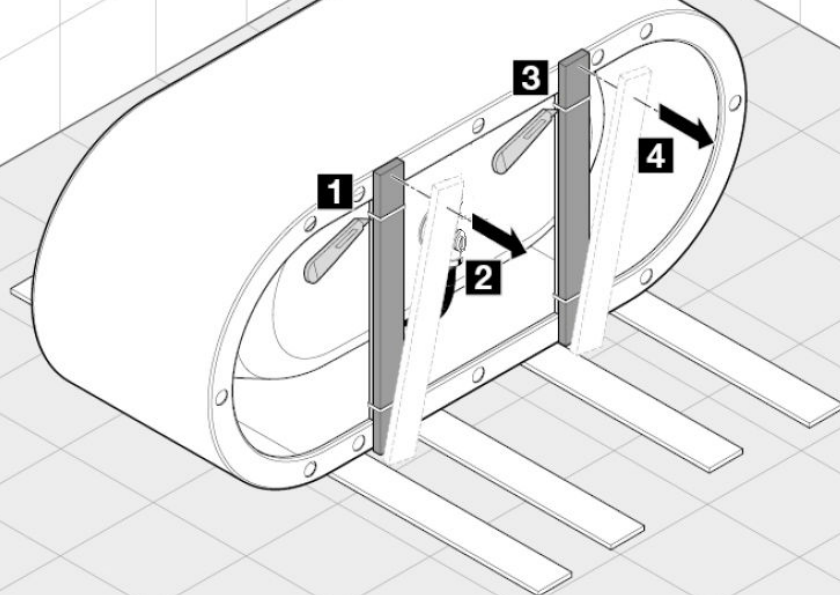



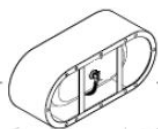


8.


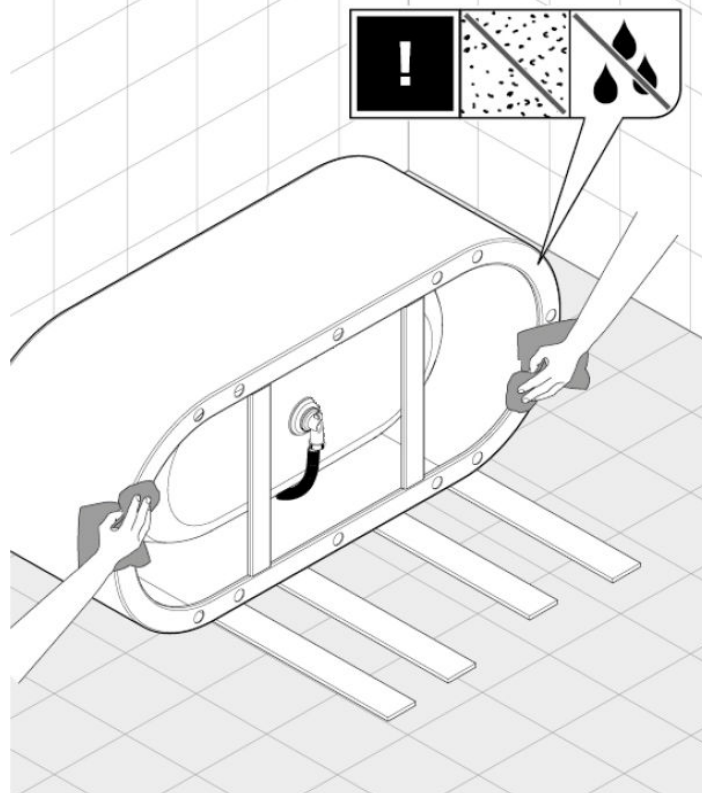


9.

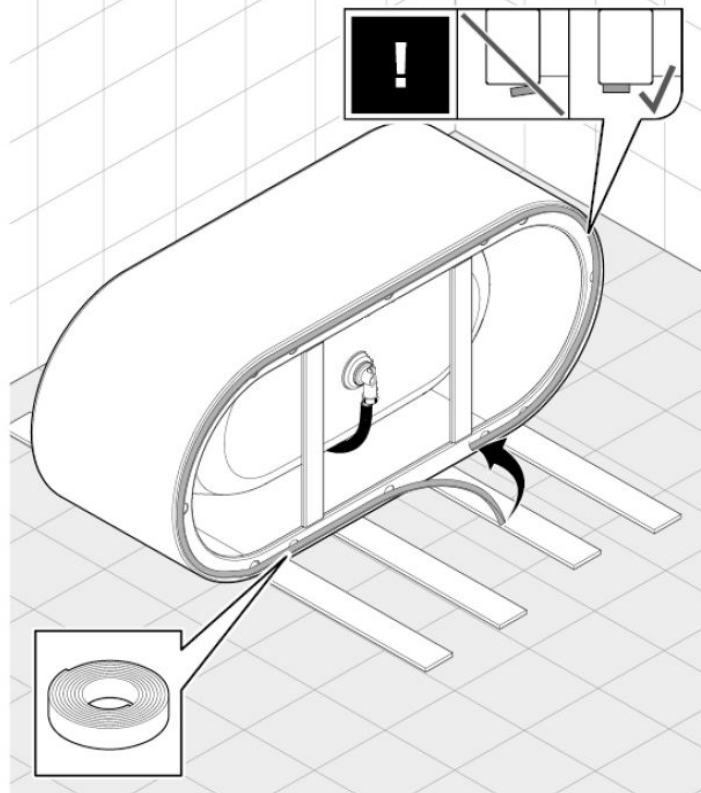

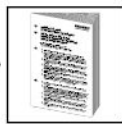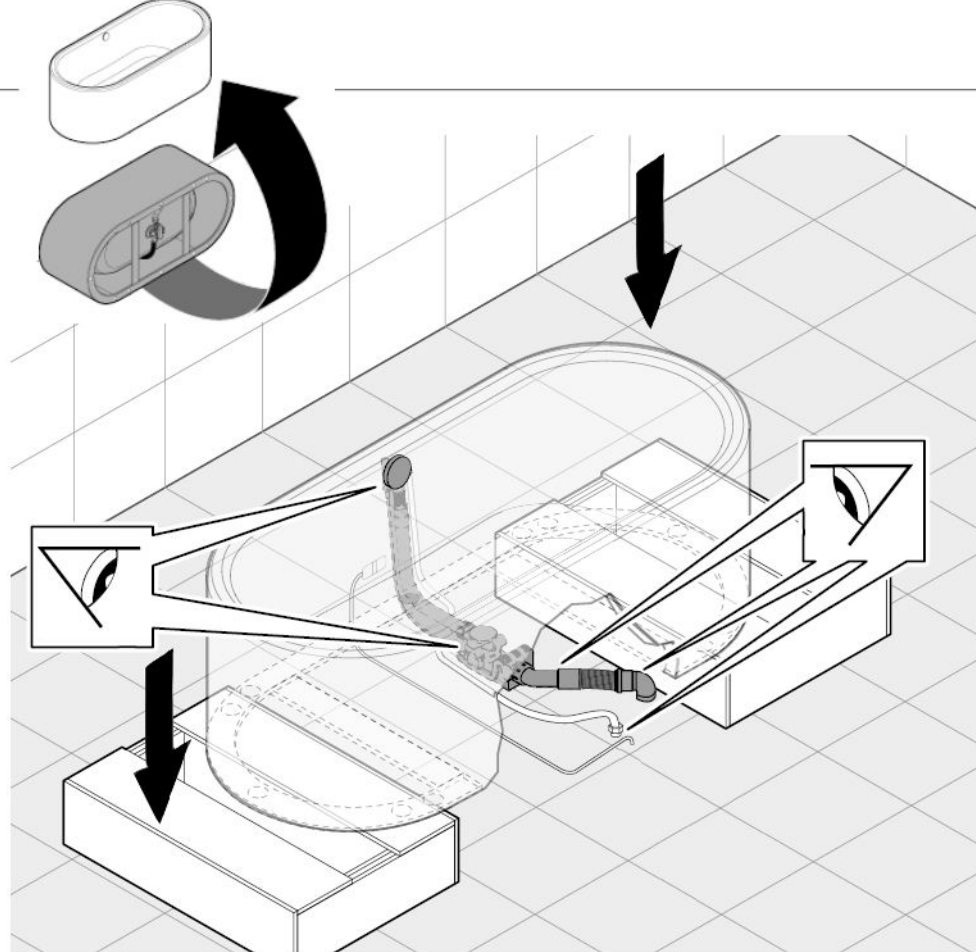

****THE WASTE FITTINGS PICTURED ARE NOT APPLICABLE IN AUSTRALIA. PLEASE SEE PAGE 15 FOR AU APPROVED OVERFLOW AND WASTE FITTINGS.**

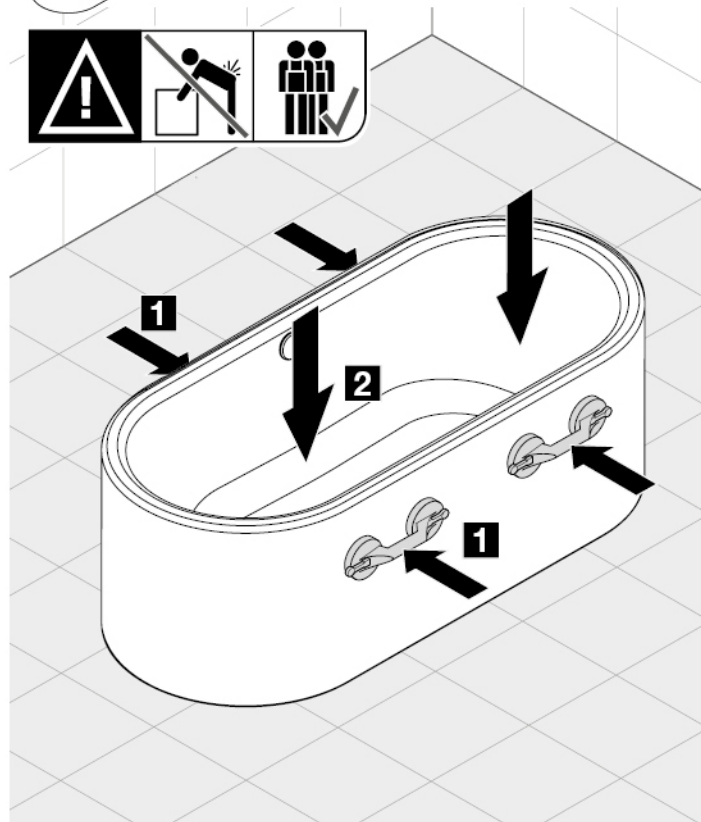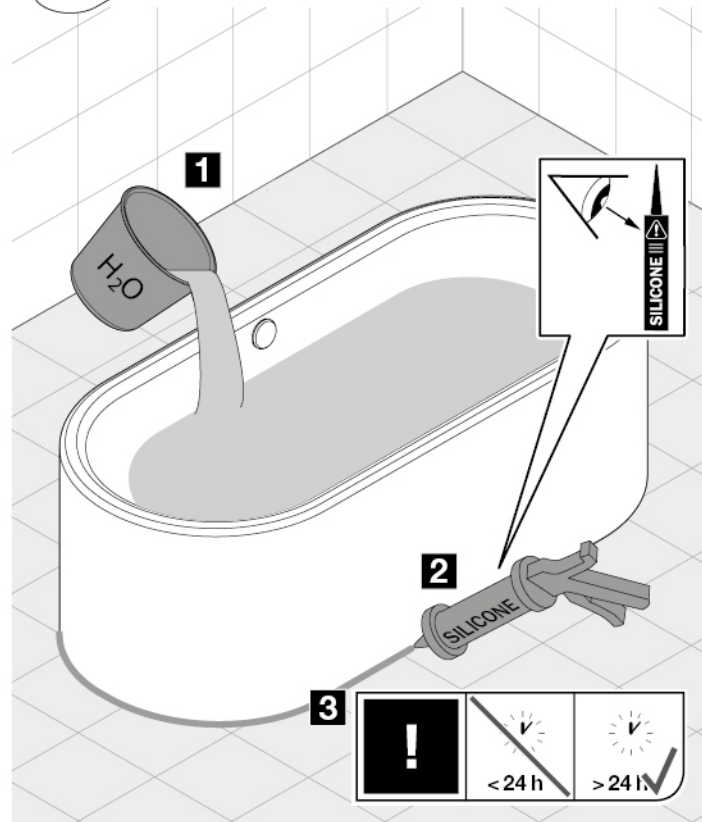**11.****12.**

KALDEWEI



Franz Kaldewei GmbH & Co. KG

Beckumer Str. 33-35

D-59229 Ahlen

 +49 2382 785 0

 +49 2382 785 200




www.kaldewei.com






AUSTRALIA APPROVED
WASTE AND OVERFLOW
FITTINGS

Bath Overflow Waste Installation Instructions Models 616202 & 616201




MOUNTING OVERFLOW

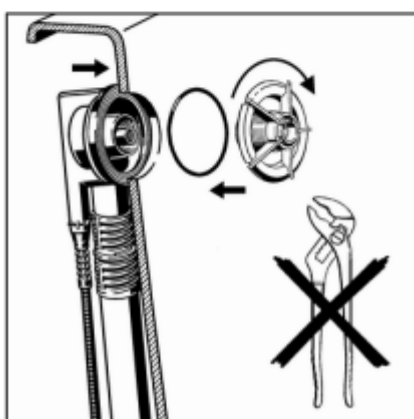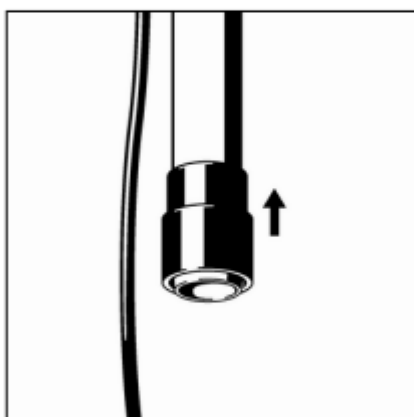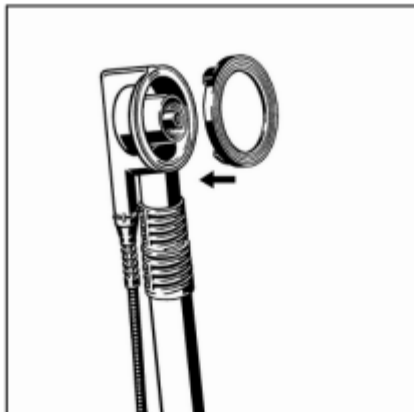




MOUNTING THE DRAIN

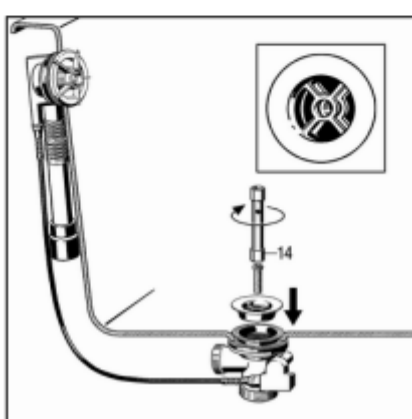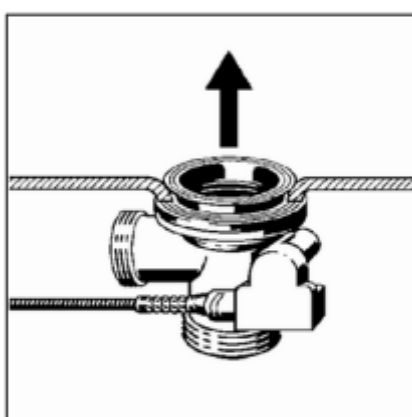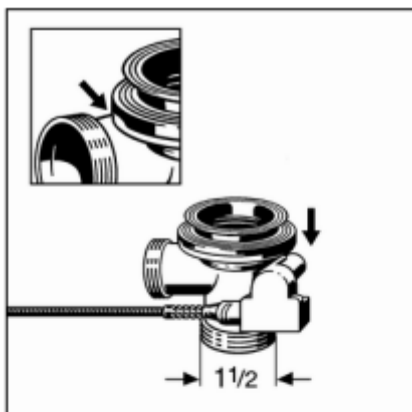


CONNECTING OVERFLOW + DRAIN

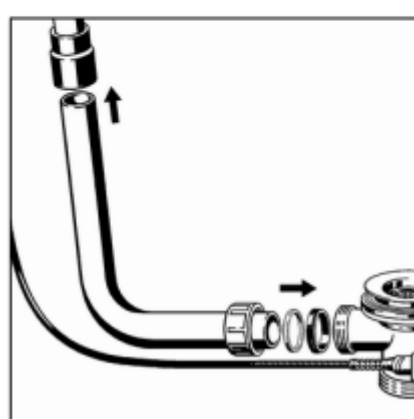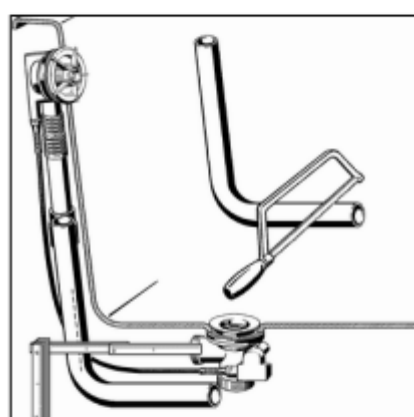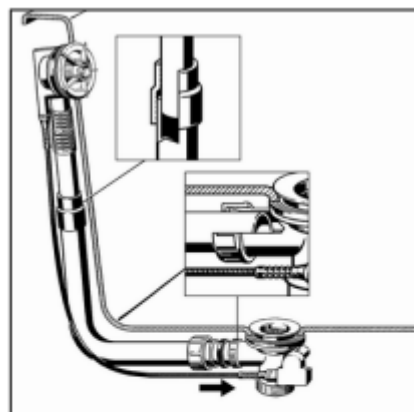



MOUNTING OVERFLOW

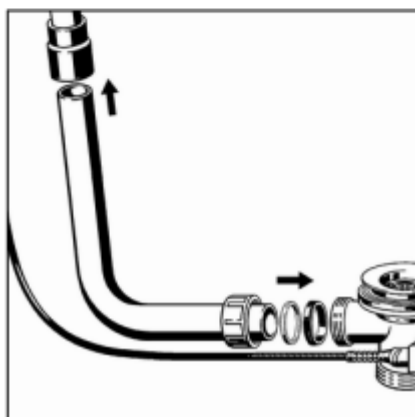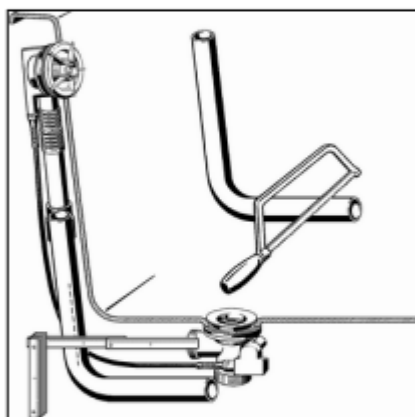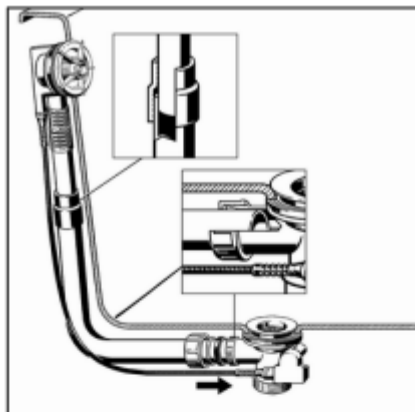


CONNECTING THE WASTEWATER SYSTEM

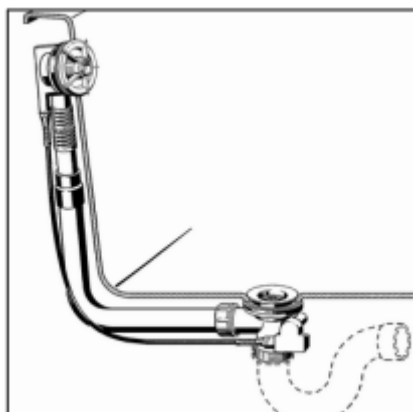


MOUNTING EQUIPMENT SET

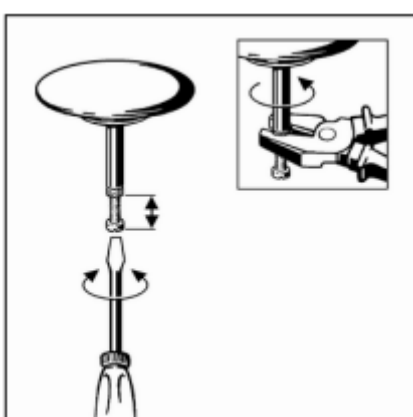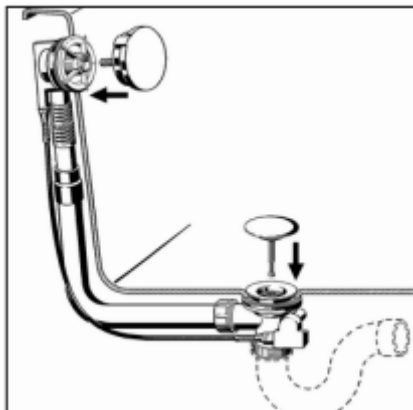


LEAKAGE TEST

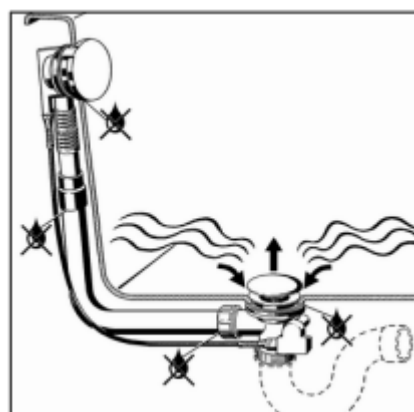


CONTROL

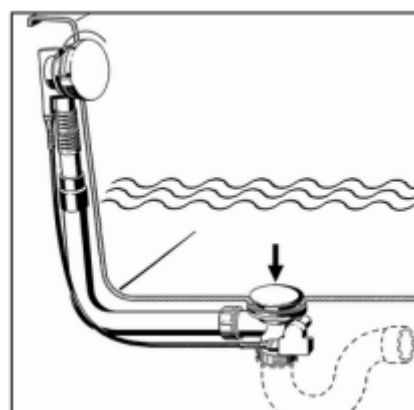


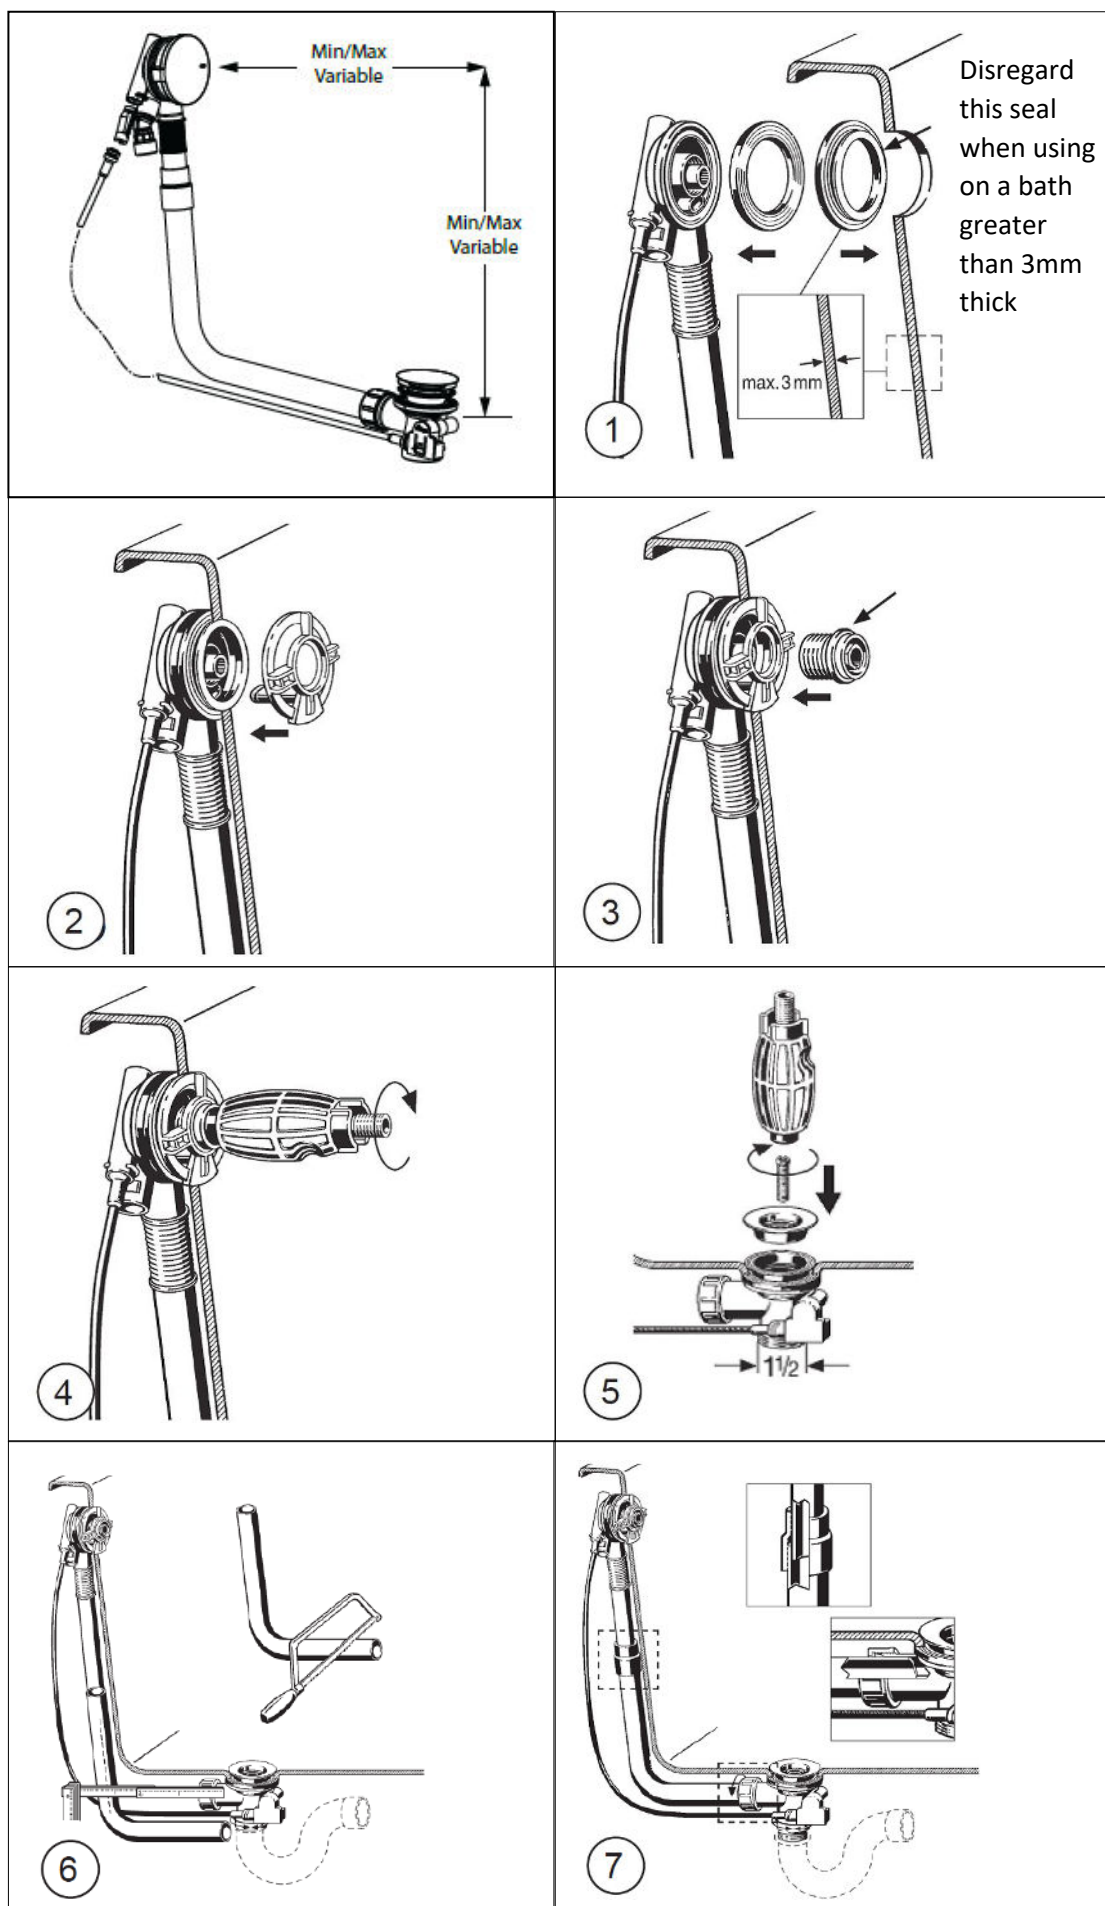


1/2" Dual Check Valve supplied must be installed to inlet connection to meet AS/NZS 3500 requirements - use thread seal tape or equivalent

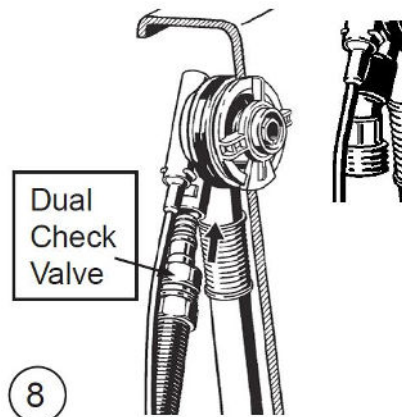


8

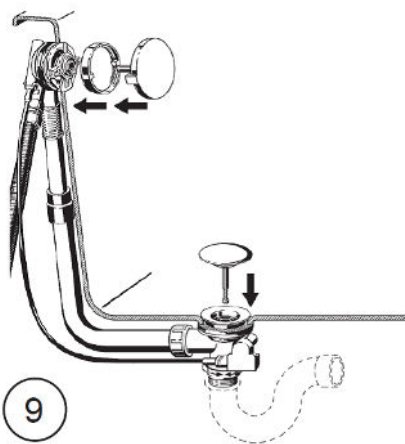


9

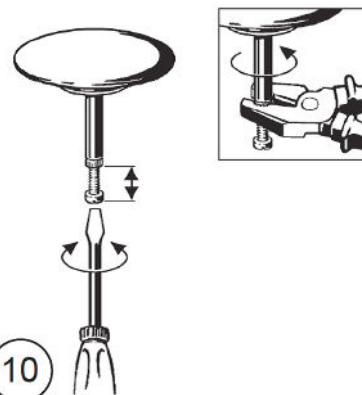


10

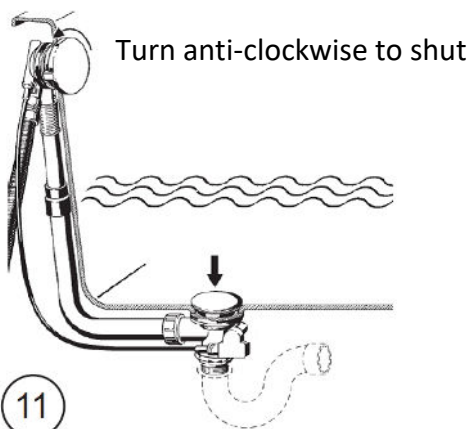

11

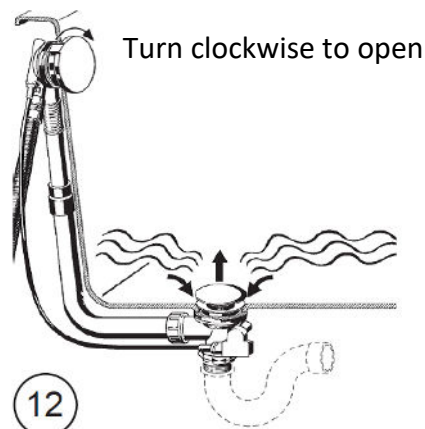

12

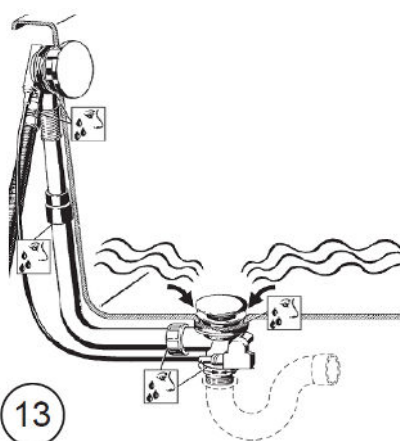

13

Installation Note:

Check all water inlet connections under pressure, and all waste connections and seals prior to sheeting and tiling to ensure watertight structure.