





BATHTUB WITH MOULDED PANEL

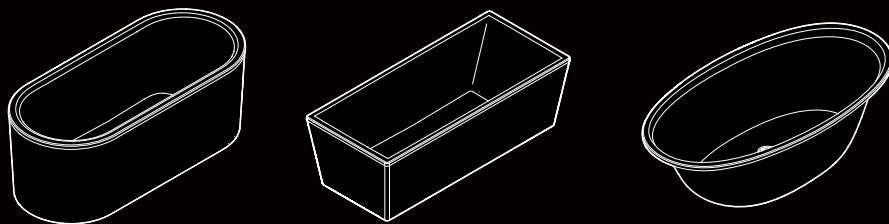


2


1.

2.

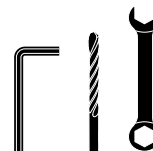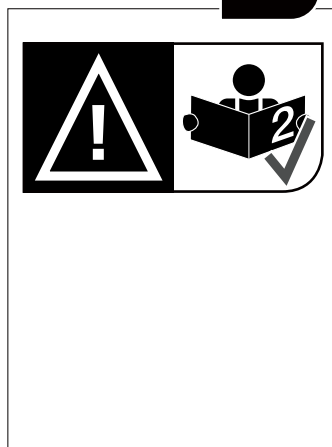
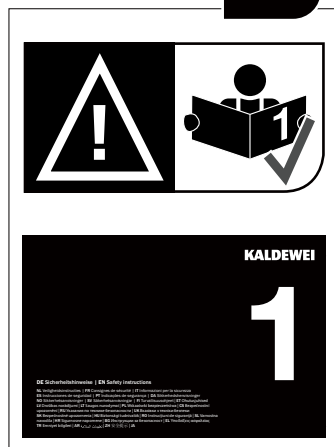




A

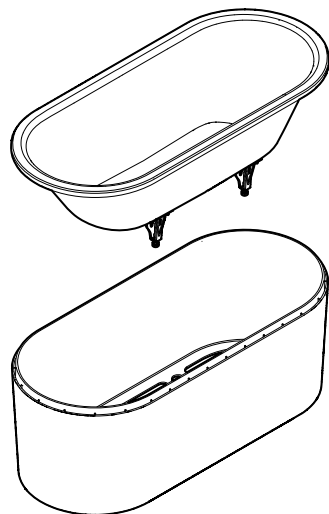


i



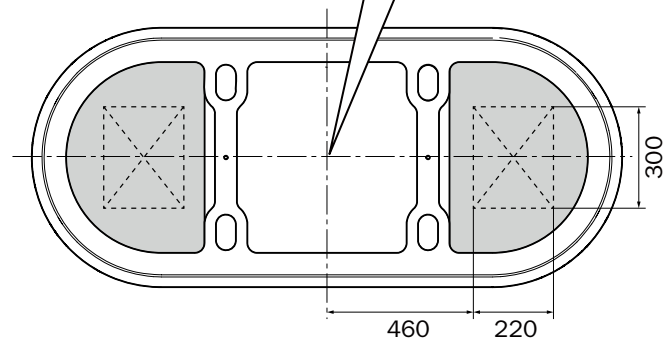
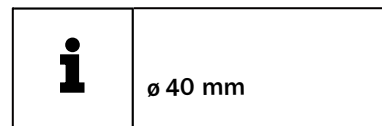


Inch = mm x 0,0394


BADEWANNE MIT VERKLEIDUNG BATHTUB WITH MOULDED PANEL



B

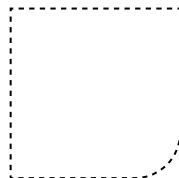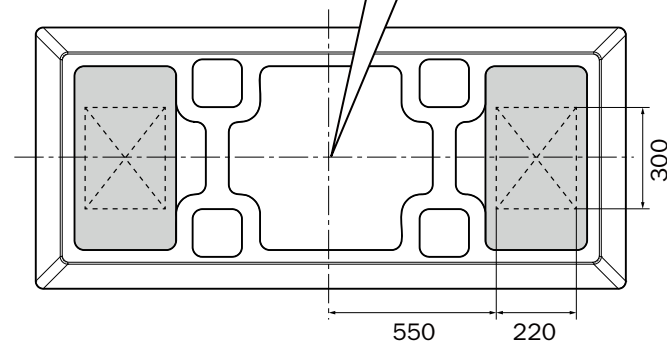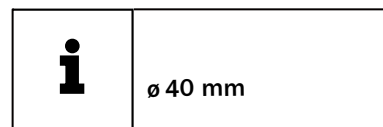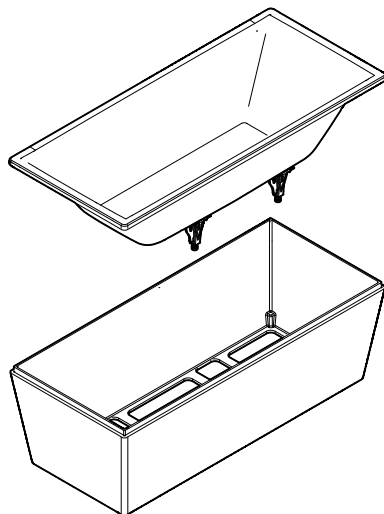

Inch = mm x 0,0394





C




10 x





4 x

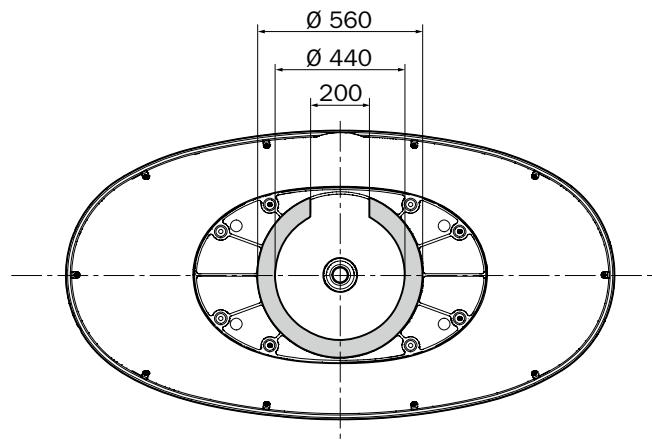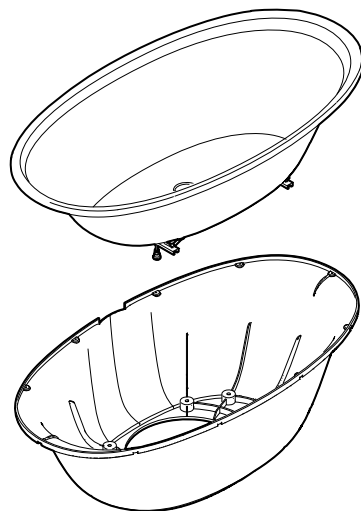


Inch = mm x 0,0394



A B 3.

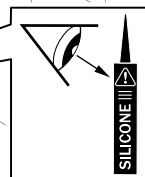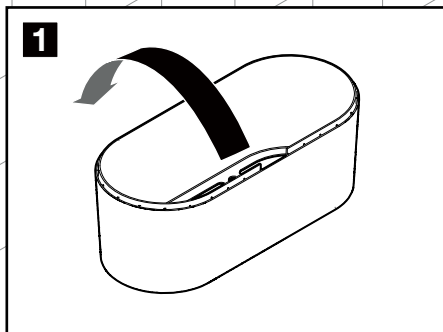


2








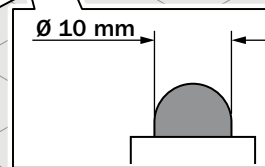


Inch = mm x 0,0394



c **3.**

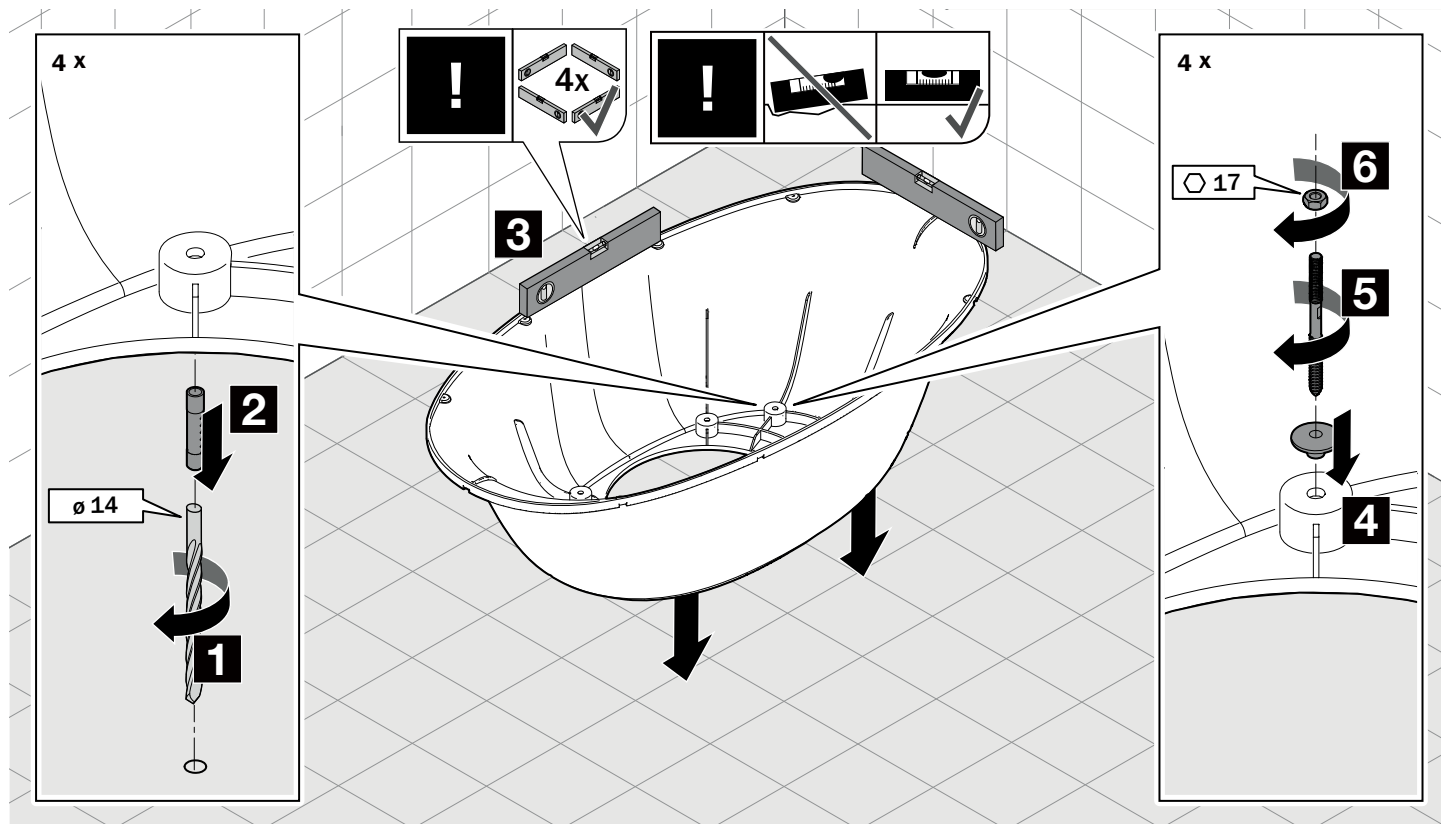

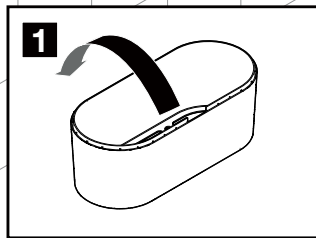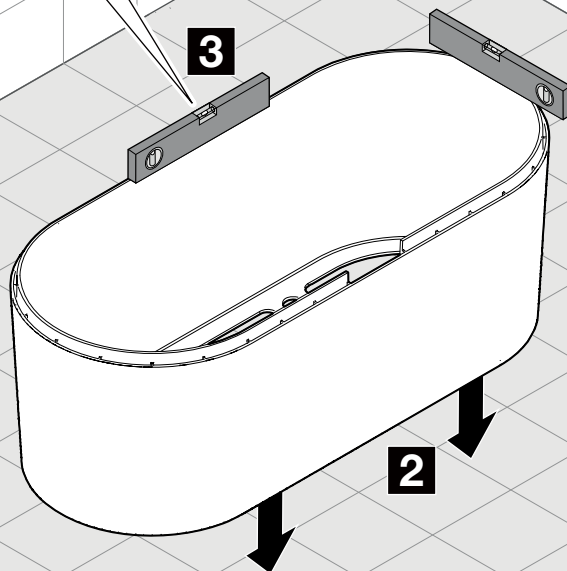

**A****B****4.****4**


Inch = mm x 0,0394



A B C 5.




A B C 6.

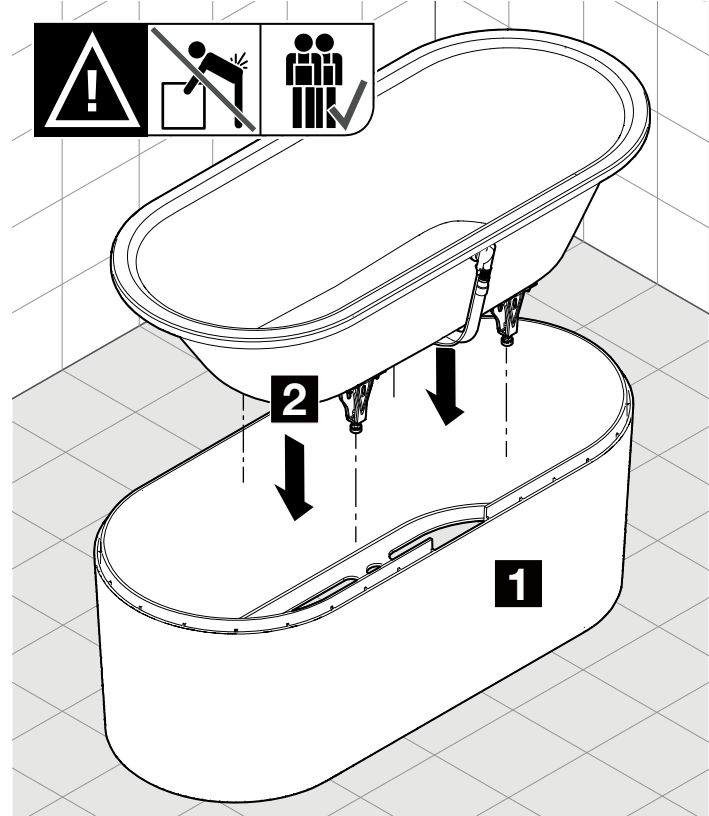
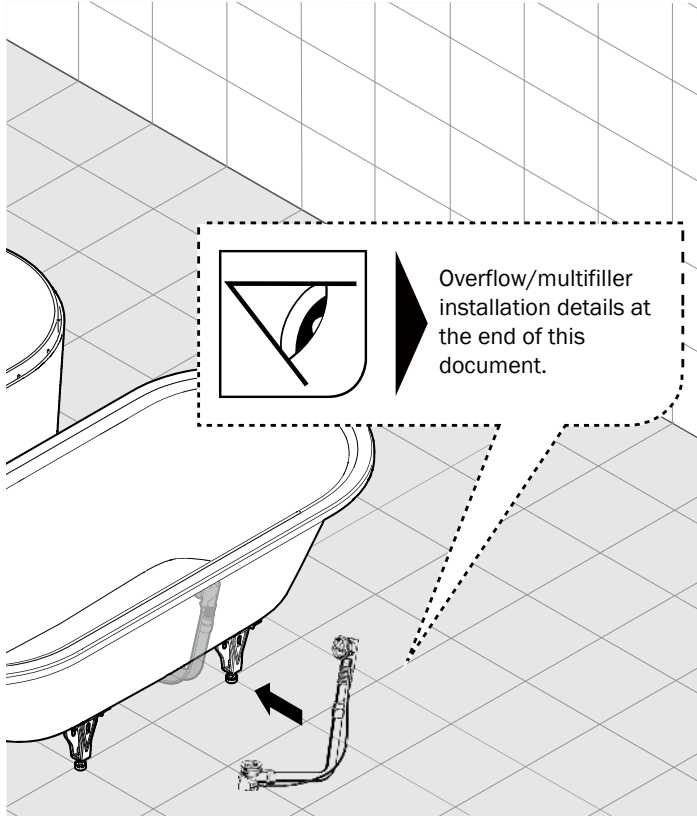


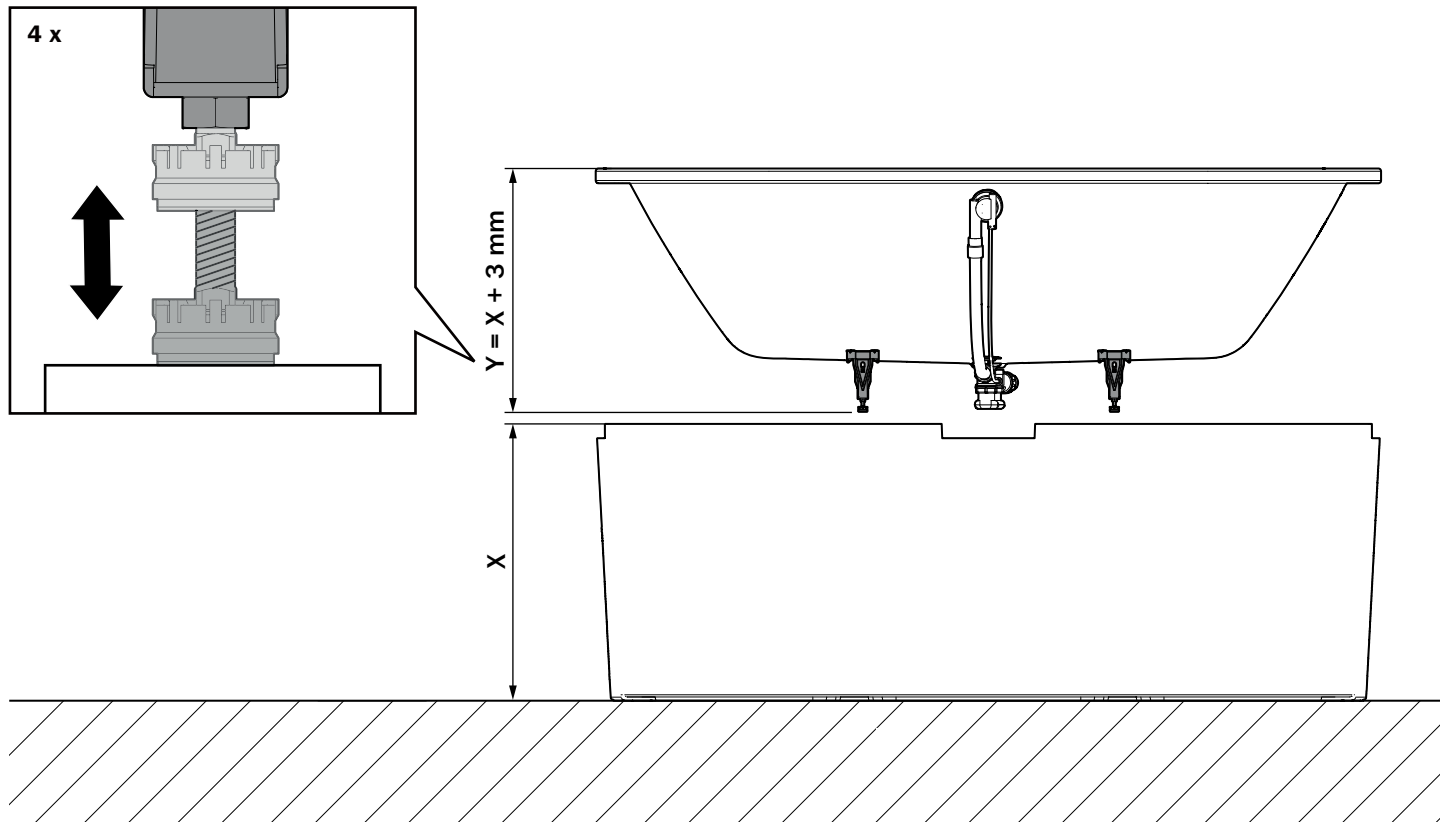


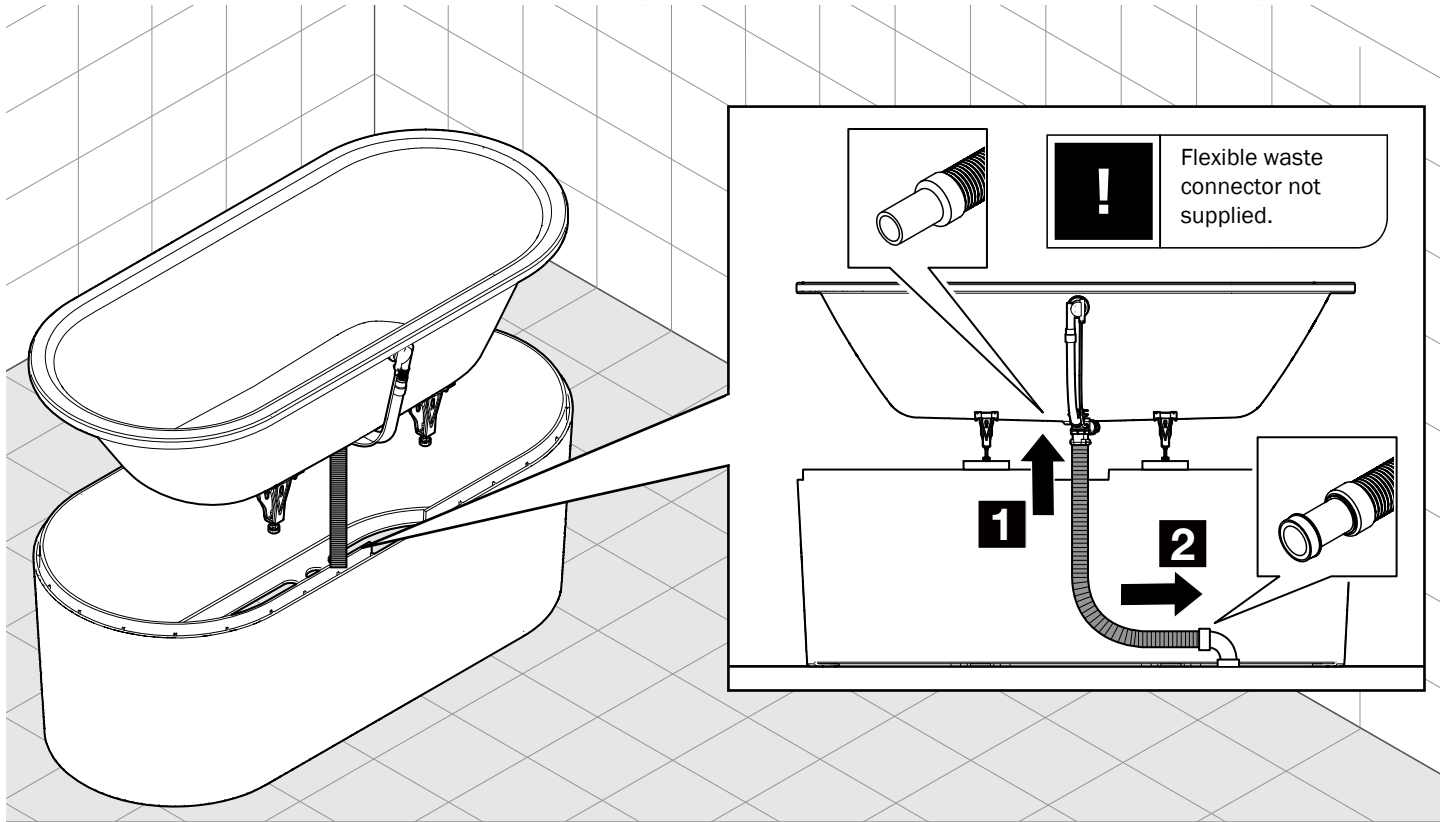






Flexible waste
connector not
supplied.

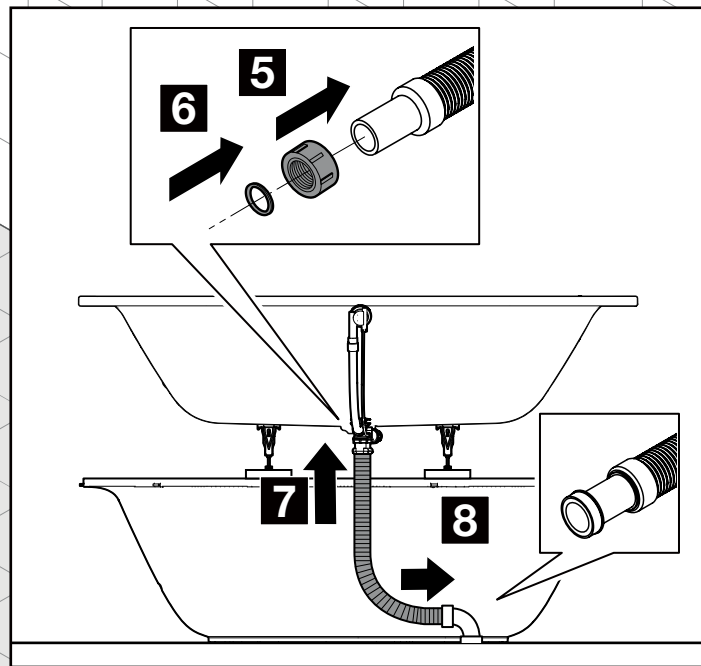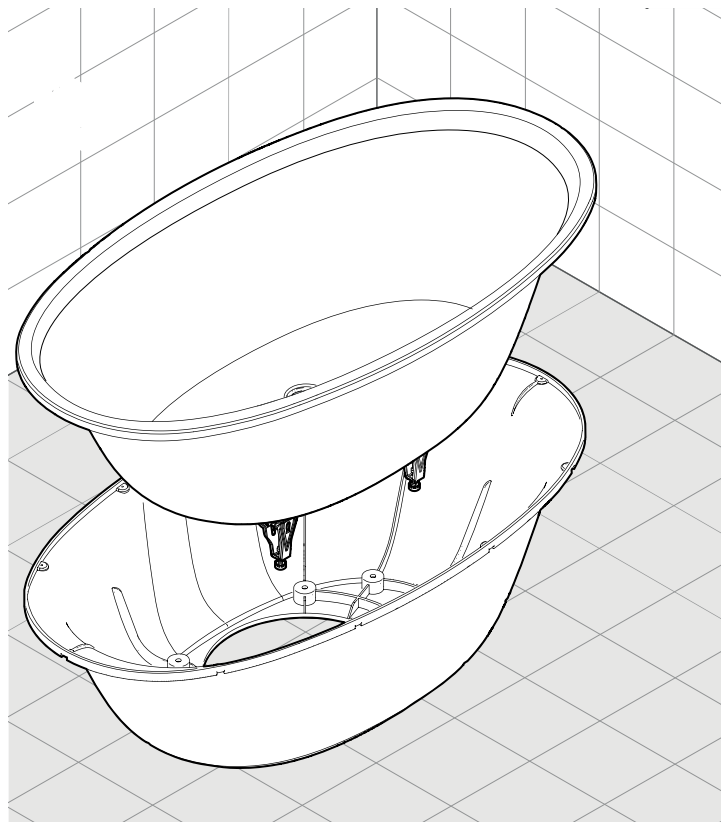

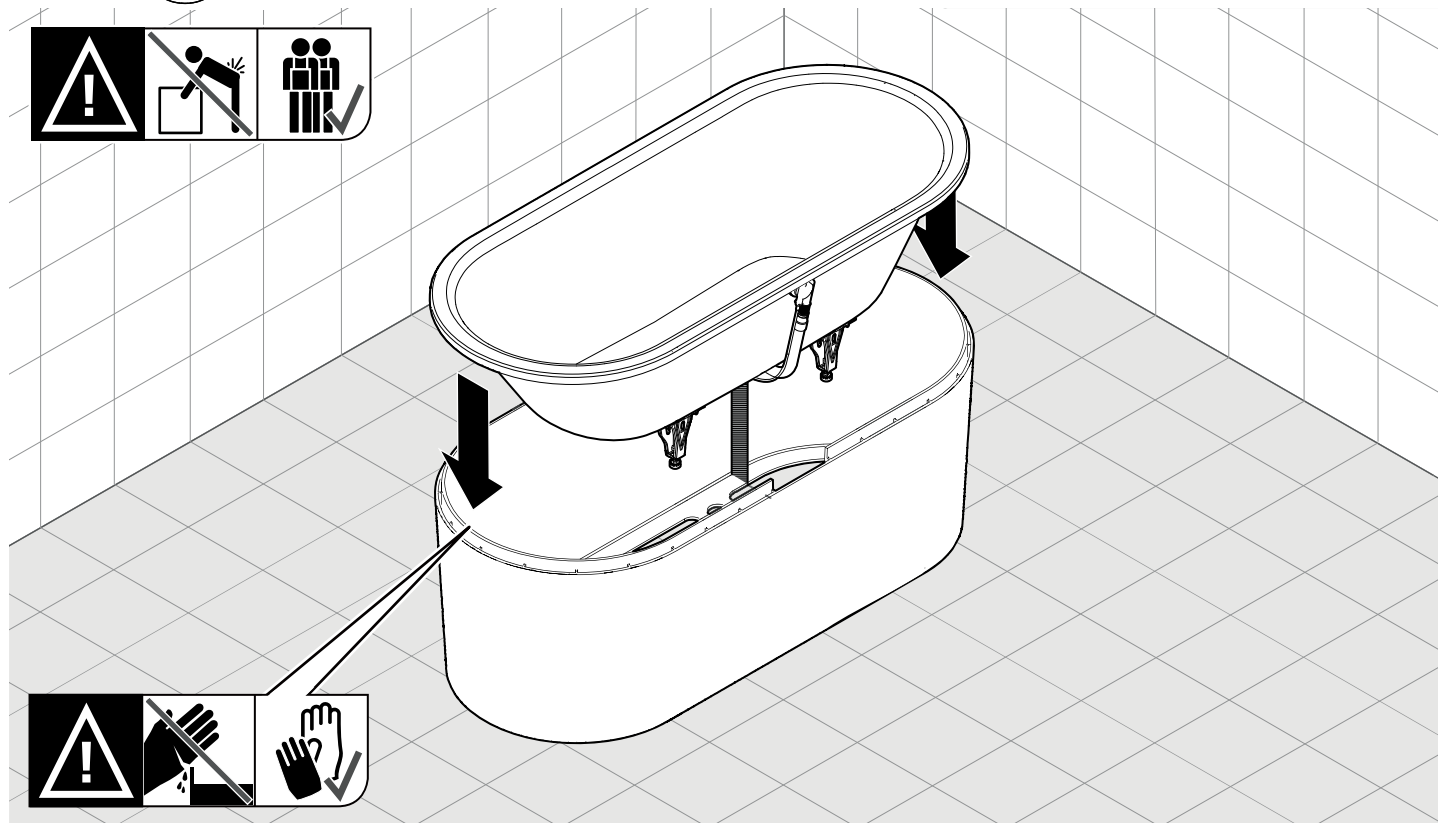




A B C 10.

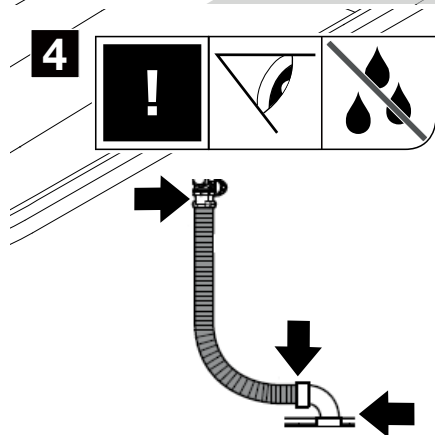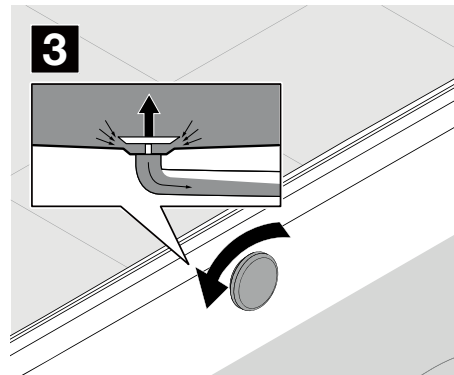
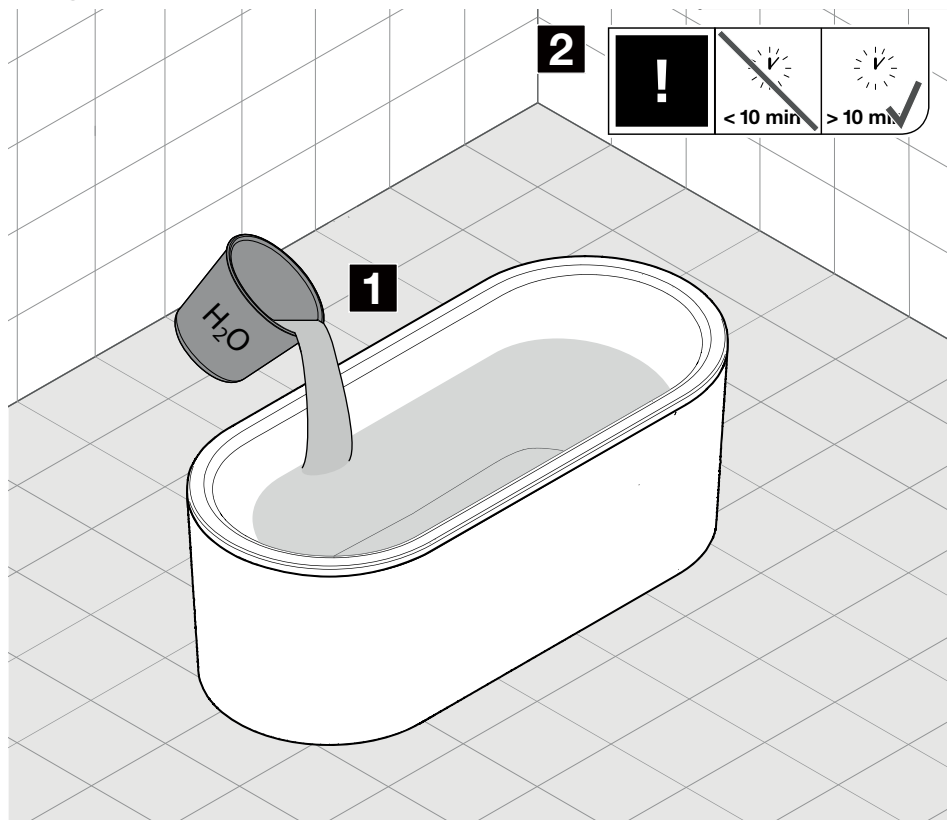





c 11.

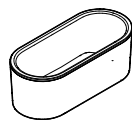

A B C 12.

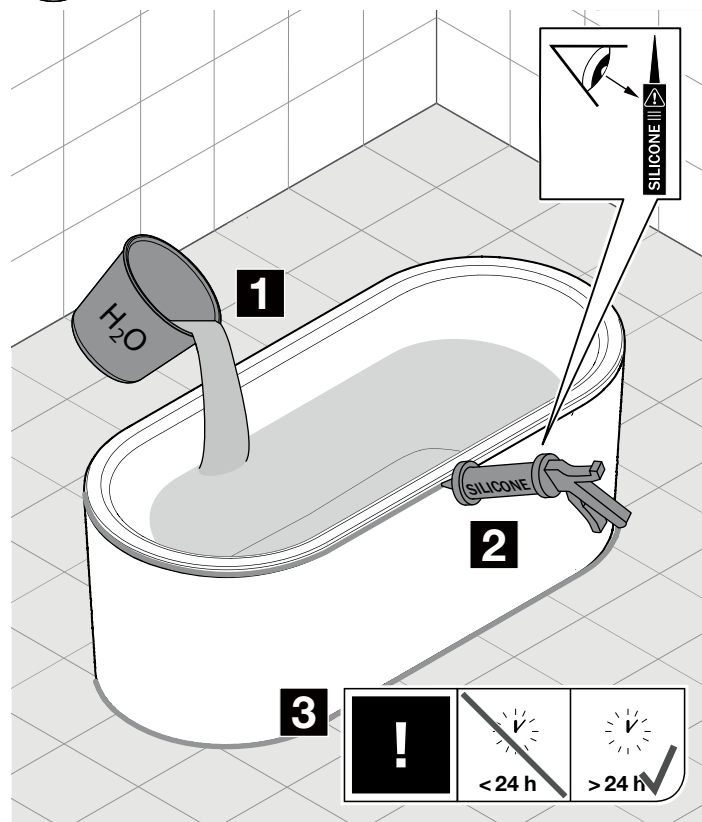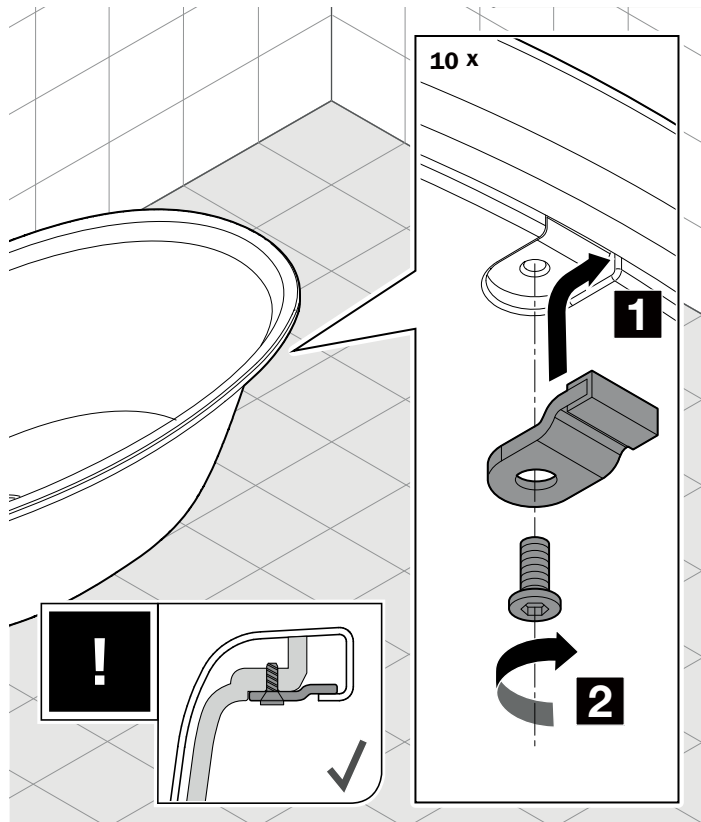

KALDEWEI

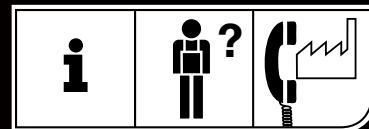

Australian Distributor
BATHE




SYDNEY HEAD OFFICE, WAREHOUSE + SHOWROOM
25 John Street, Leichhard NSW 2040
tel. +61 2 9509 0000
Showroom by appointment only

ENQUIRIES: sales@bathe.net.au
AFTER SALES & SERVICE: service@bathe.net.au






Bath Overflow Waste Installation Instructions Models 616202 & 616201




MOUNTING OVERFLOW

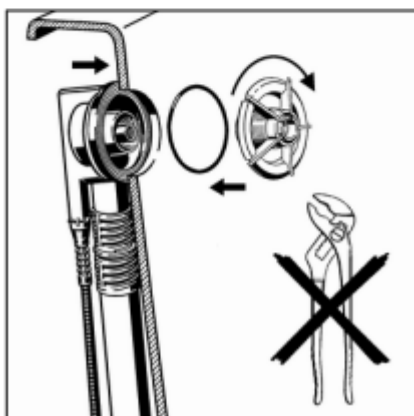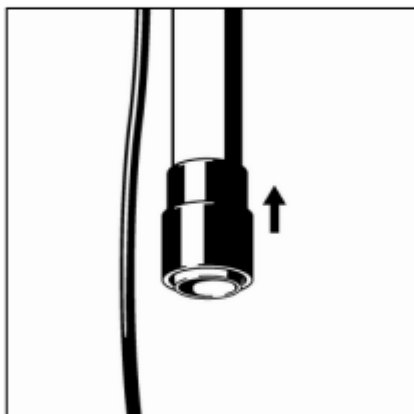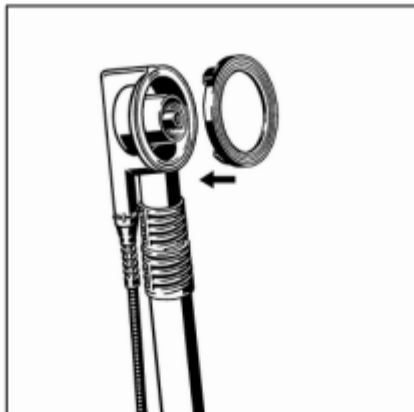




MOUNTING THE DRAIN

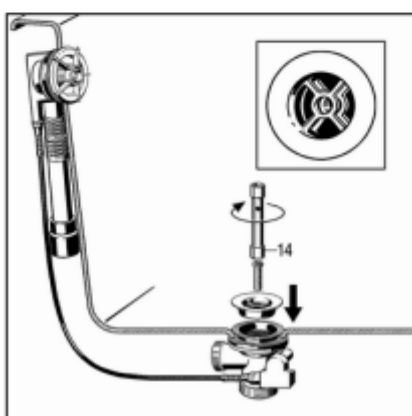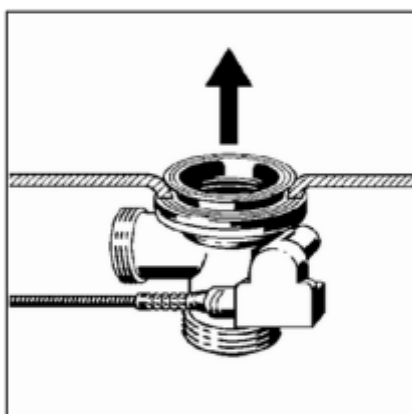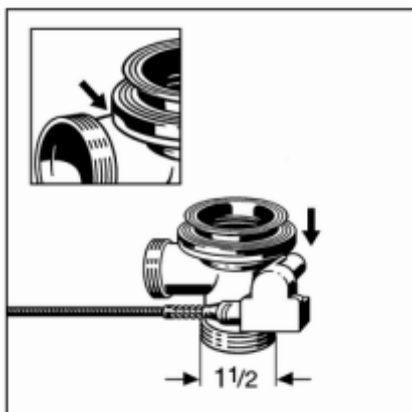


CONNECTING OVERFLOW + DRAIN

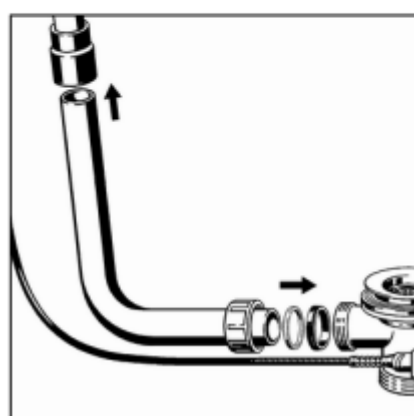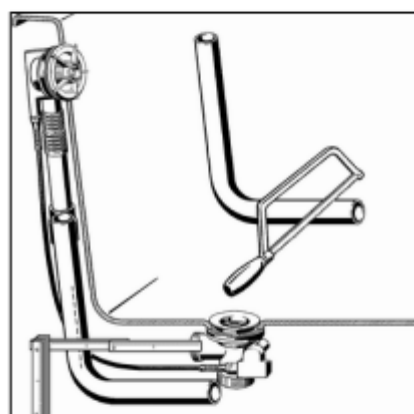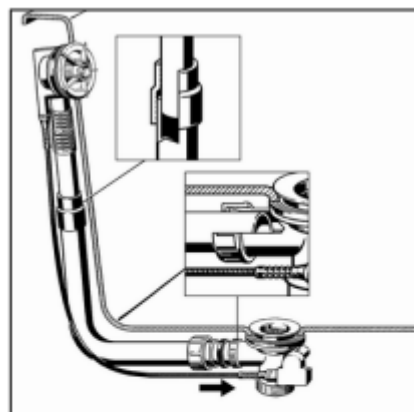



MOUNTING OVERFLOW

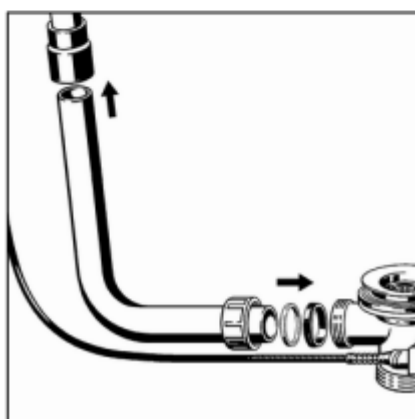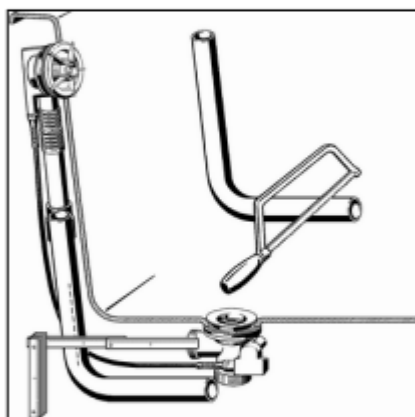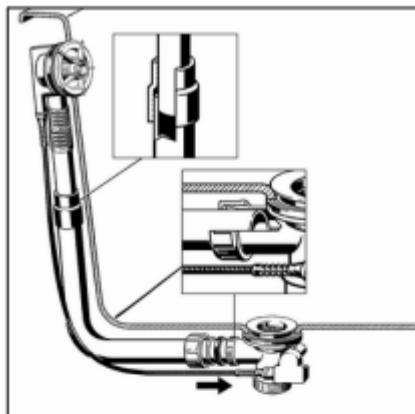


CONNECTING THE WASTEWATER SYSTEM

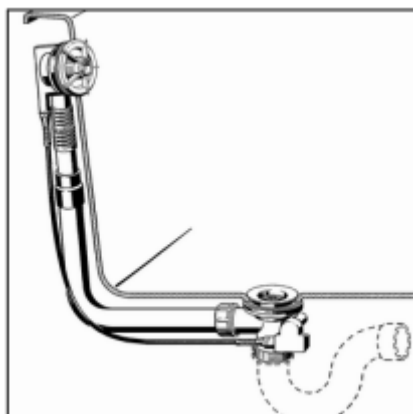


MOUNTING EQUIPMENT SET

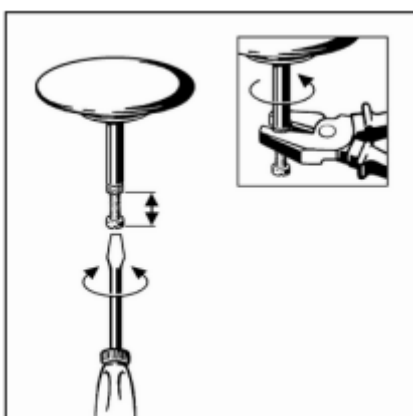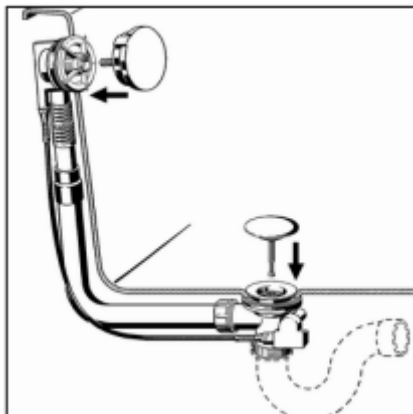


LEAKAGE TEST

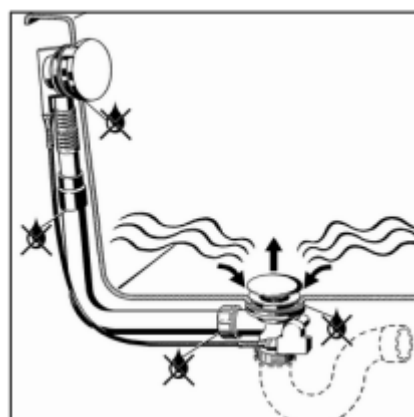


CONTROL

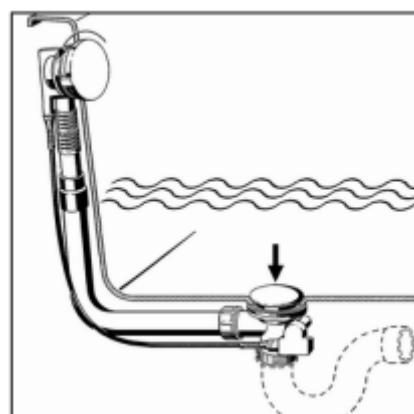


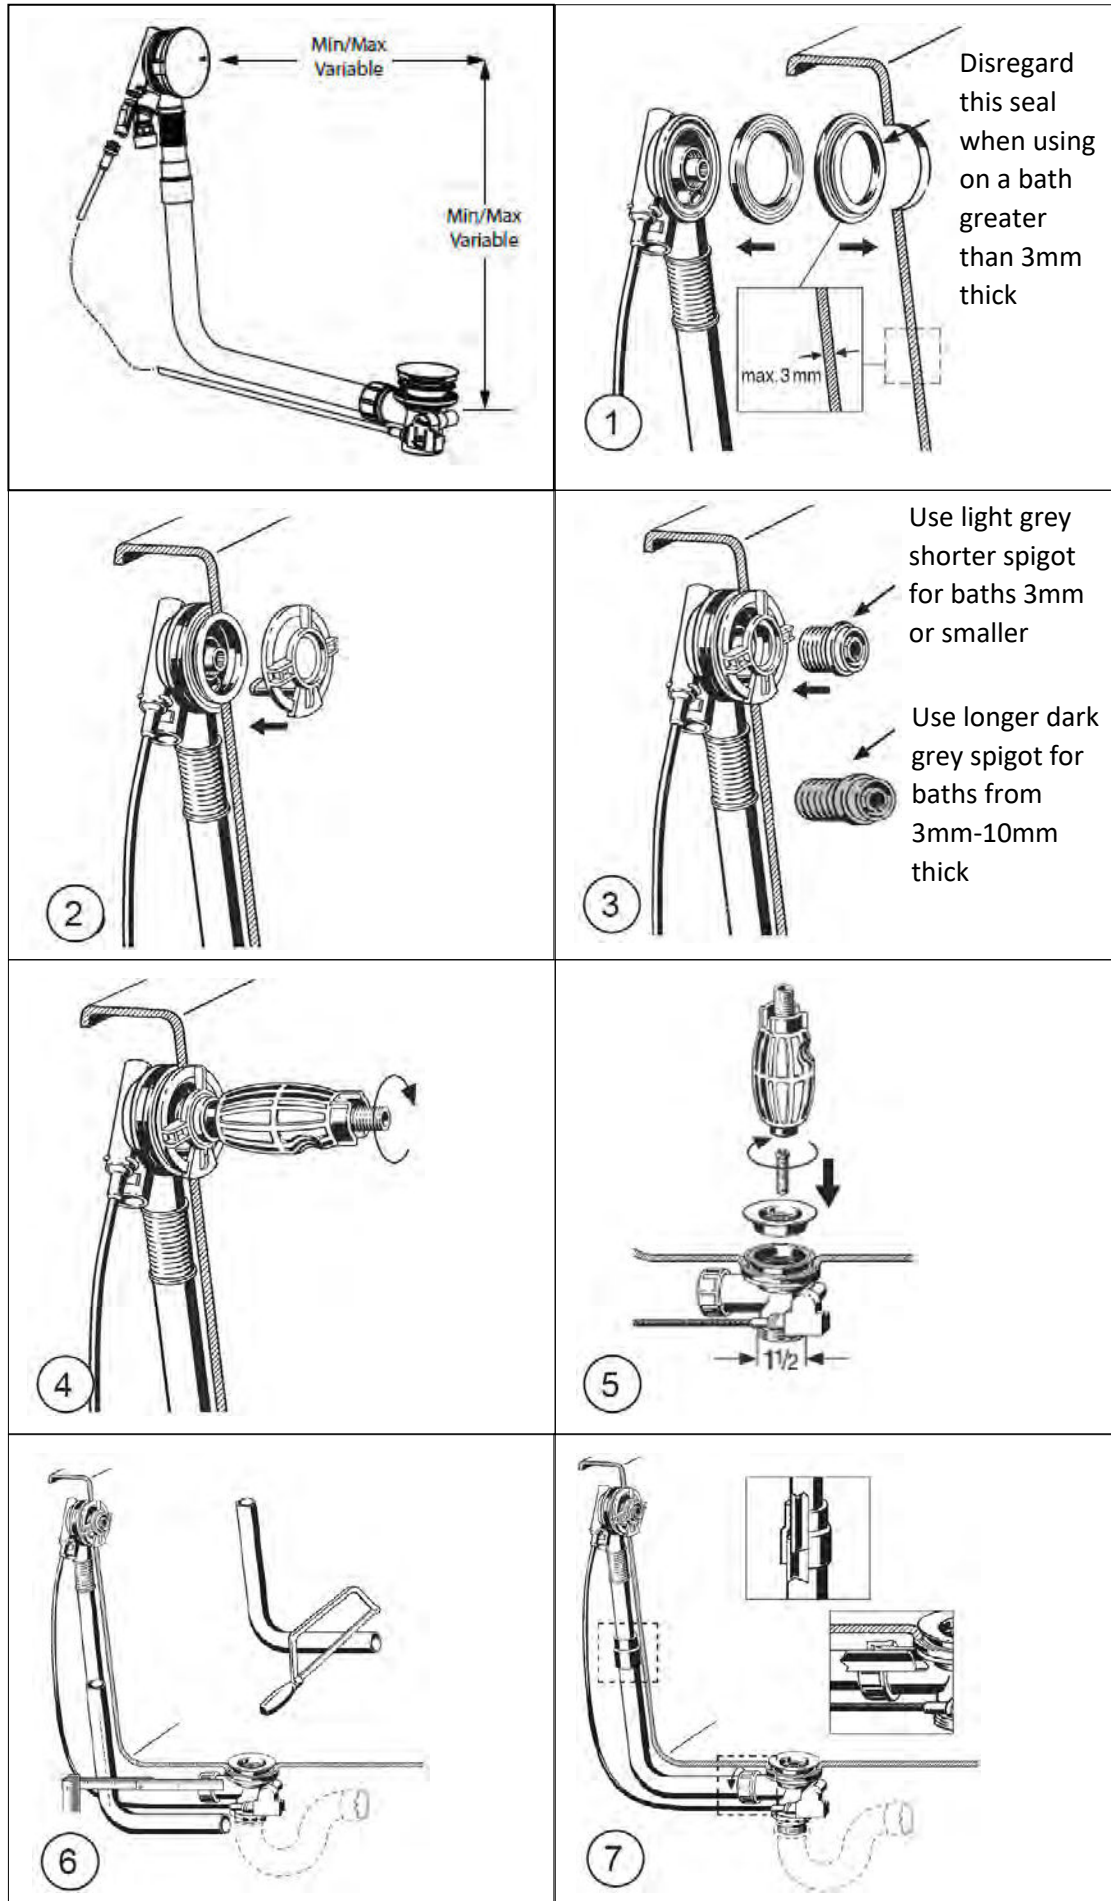


1/2" Dual Check Valve supplied must be installed to inlet connection to meet AS/NZS 3500 requirements - use thread seal tape or equivalent

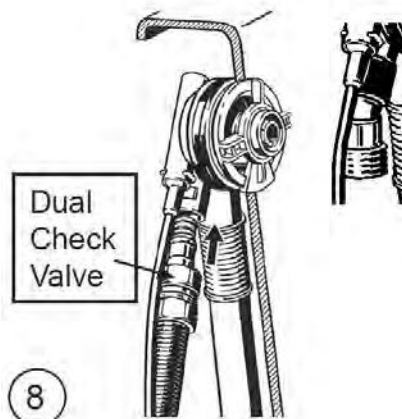


8

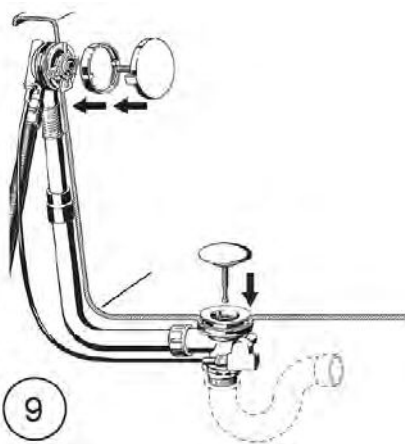


9

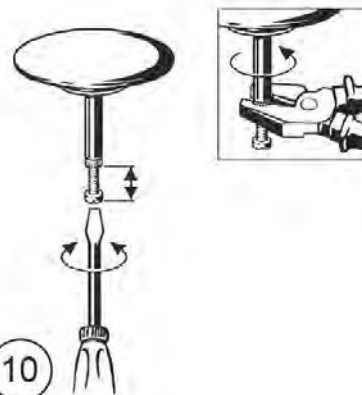


10

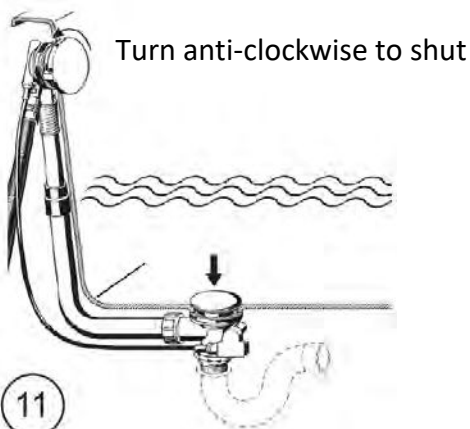

11

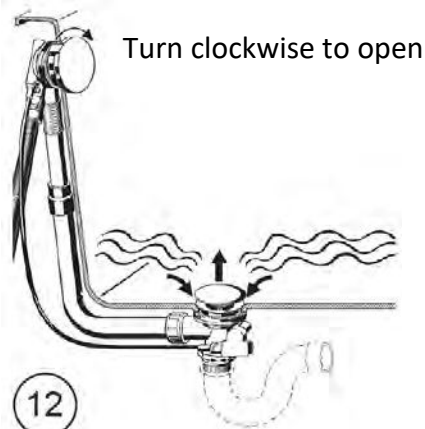

12

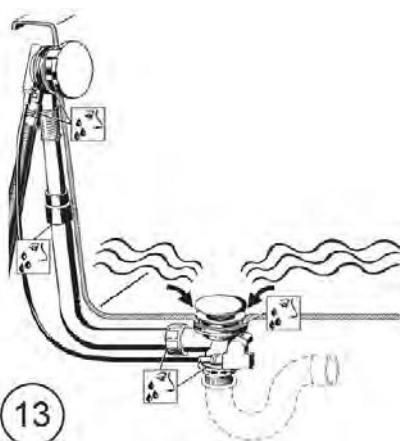









13

Installation Note:

Check all water inlet connections under pressure, and all waste connections and seals prior to sheeting and tiling to ensure watertight structure.


EINBAUANLEITUNG / INSTALLATION INSTRUCTIONS AB- UND ÜBERLAUFGARNITUR / DRAIN AND OVERFLOW FITTINGS MOD. KA 4040 AUSTRALIA MOD. KA 4060 AUSTRALIA

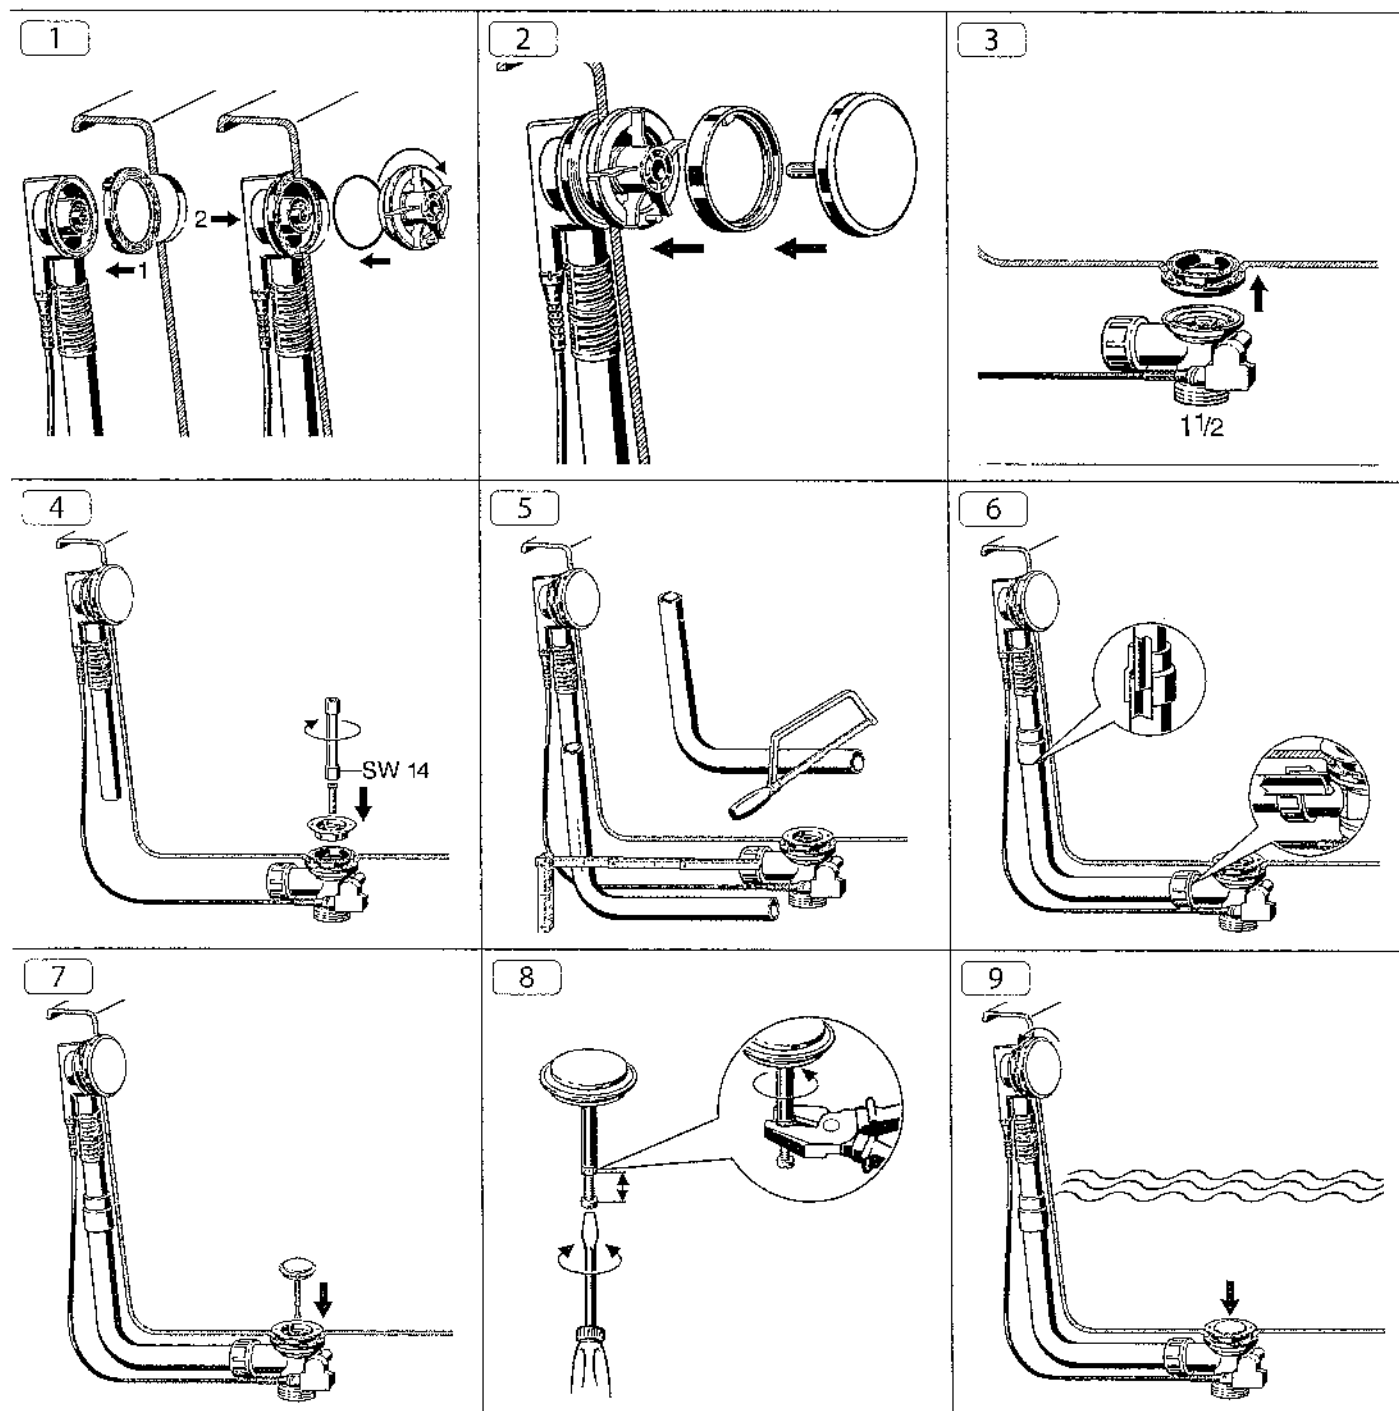


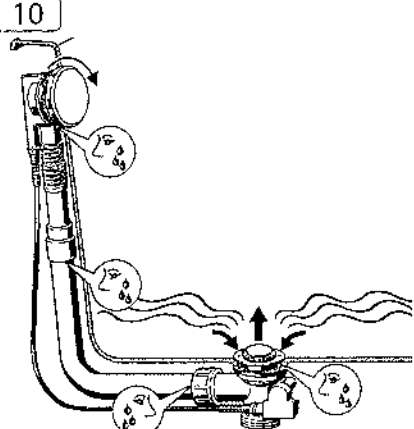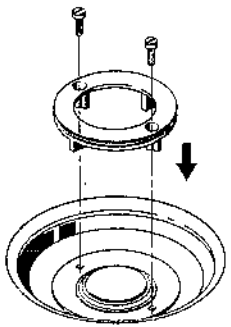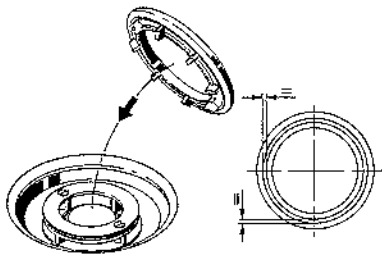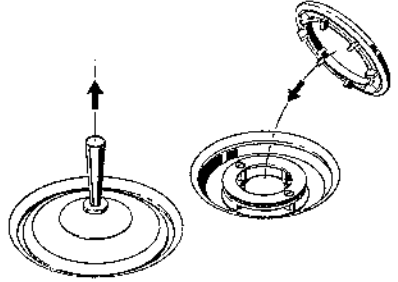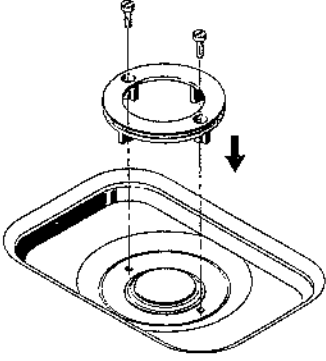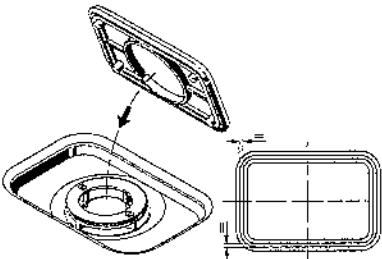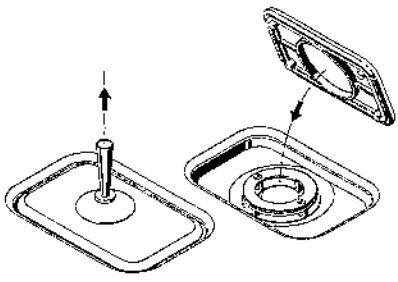Installation Note: Check waste connections and seals prior to sheeting and tiling to ensure watertight structure.

EINBAUANLEITUNG / INSTALLATION INSTRUCTIONS
AB- UND ÜBERLAUFGARNITUR MIT INTEGRIERTEM EINLAUF/
DRAIN AND OVERFLOW FITTINGS WITH INTEGRATED INLET
MOD. KA 4041 AUSTRALIA
MOD. KA 4061 AUSTRALIA




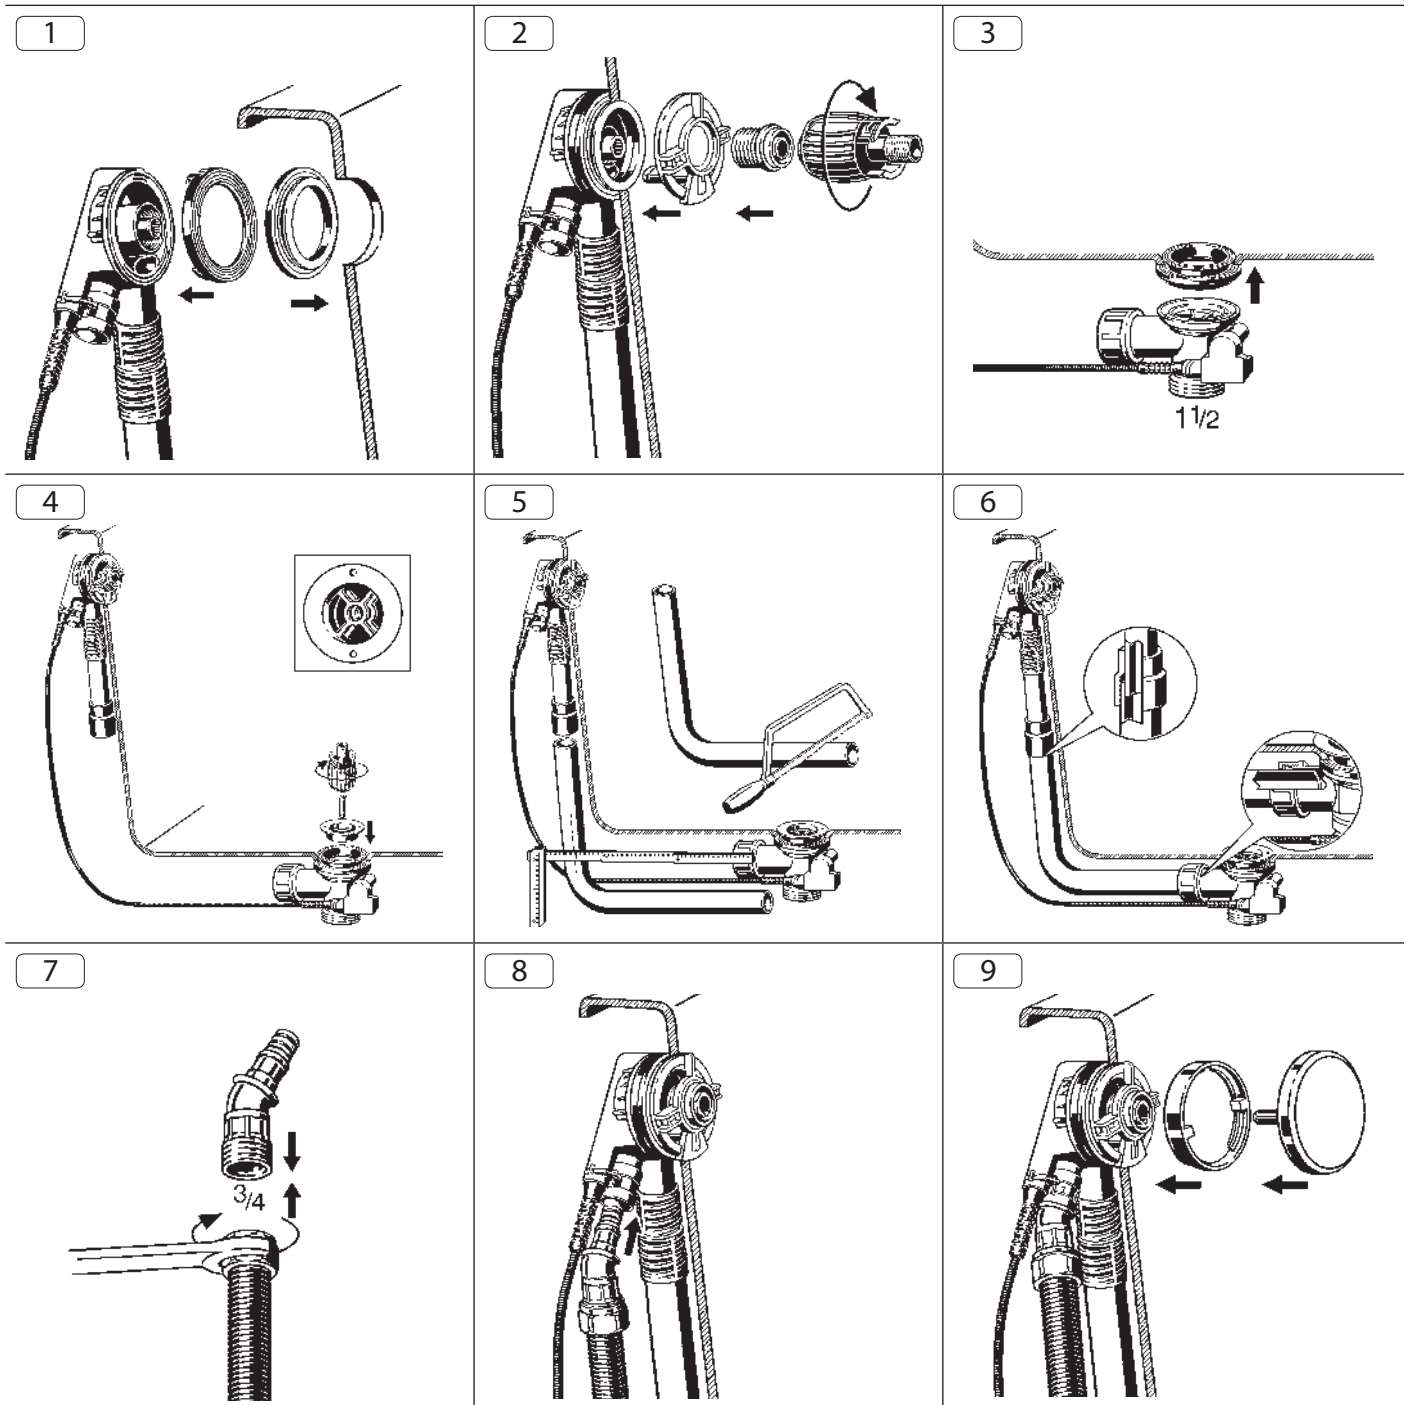

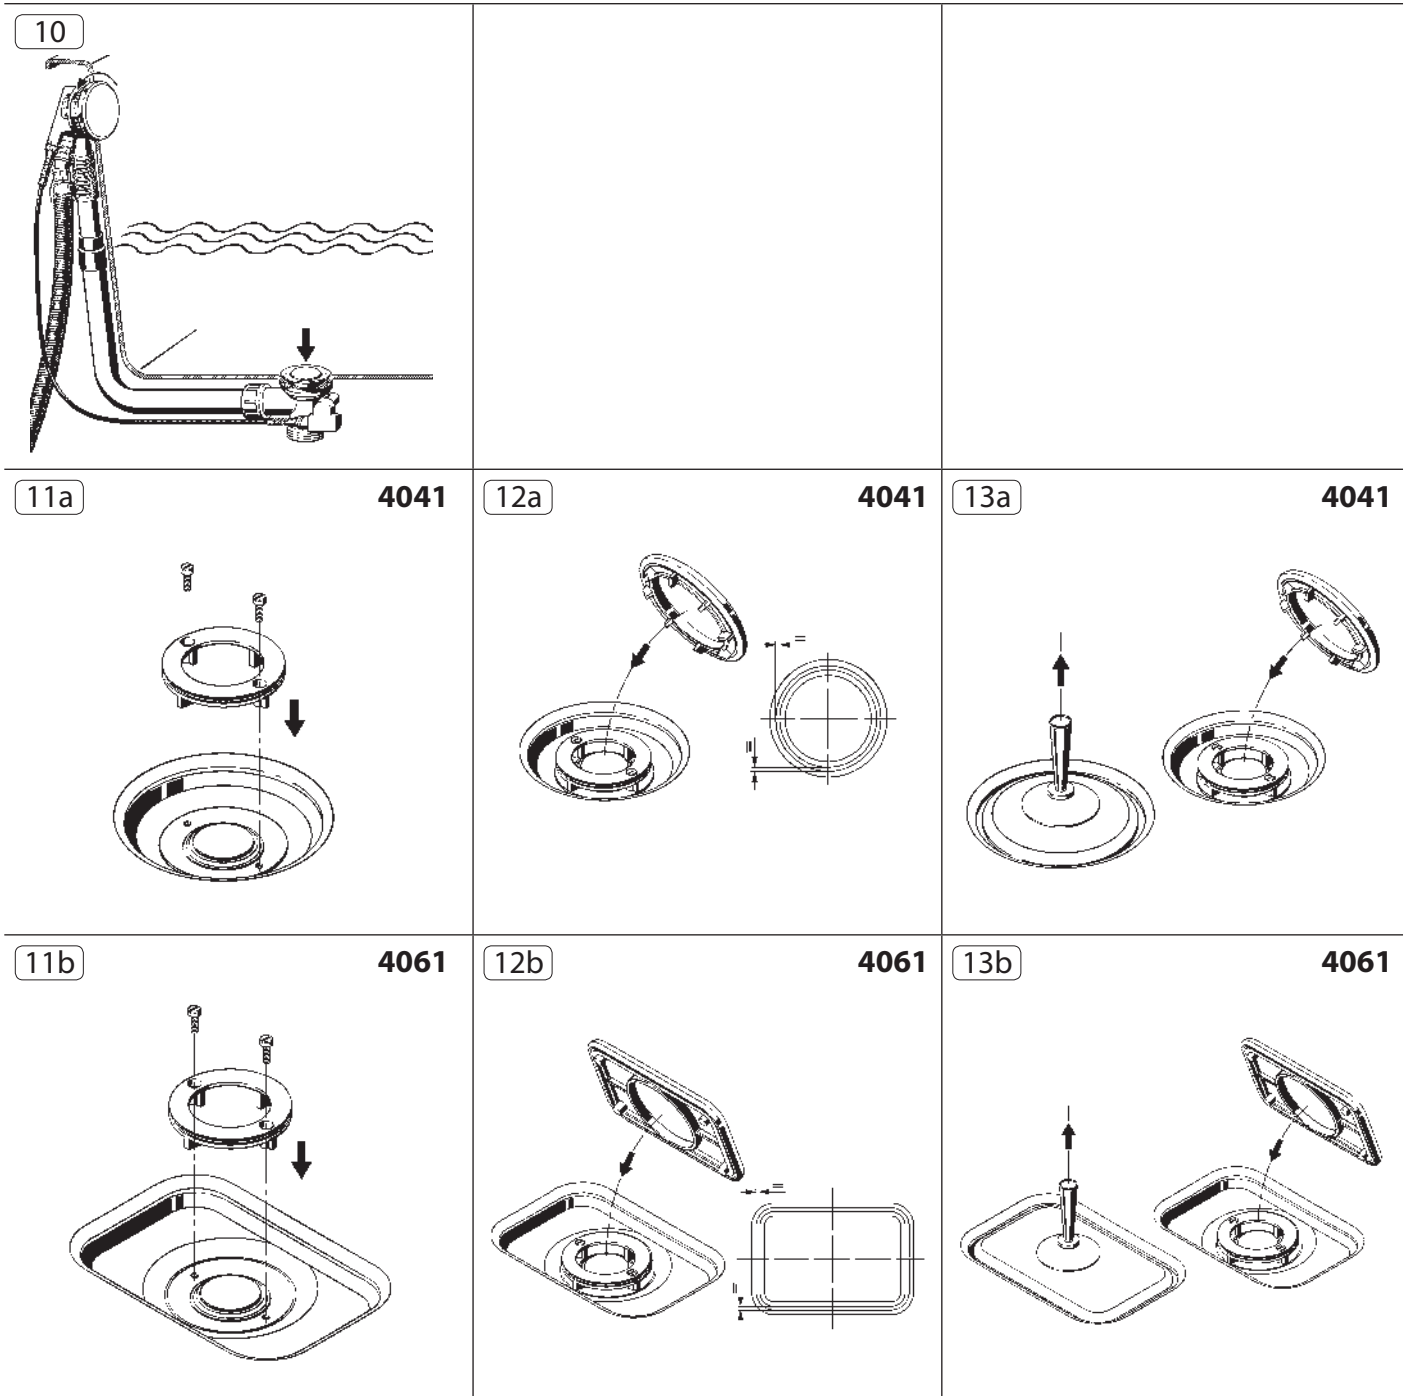
IMPORTANT: Dual Check Valve, not supplied, must be installed to inlet connection to meet AS/NZS 3500 requirements. Available for purchase separately.

Check all water inlet connections under pressure, and all waste connections and seals prior to sheeting and tiling to ensure watertight structure.


EINBAUANLEITUNG / INSTALLATION INSTRUCTIONS AB- UND ÜBERLAUFGARNITUR / DRAIN AND OVERFLOW FITTINGS MOD. KA 4080 AUSTRALIA

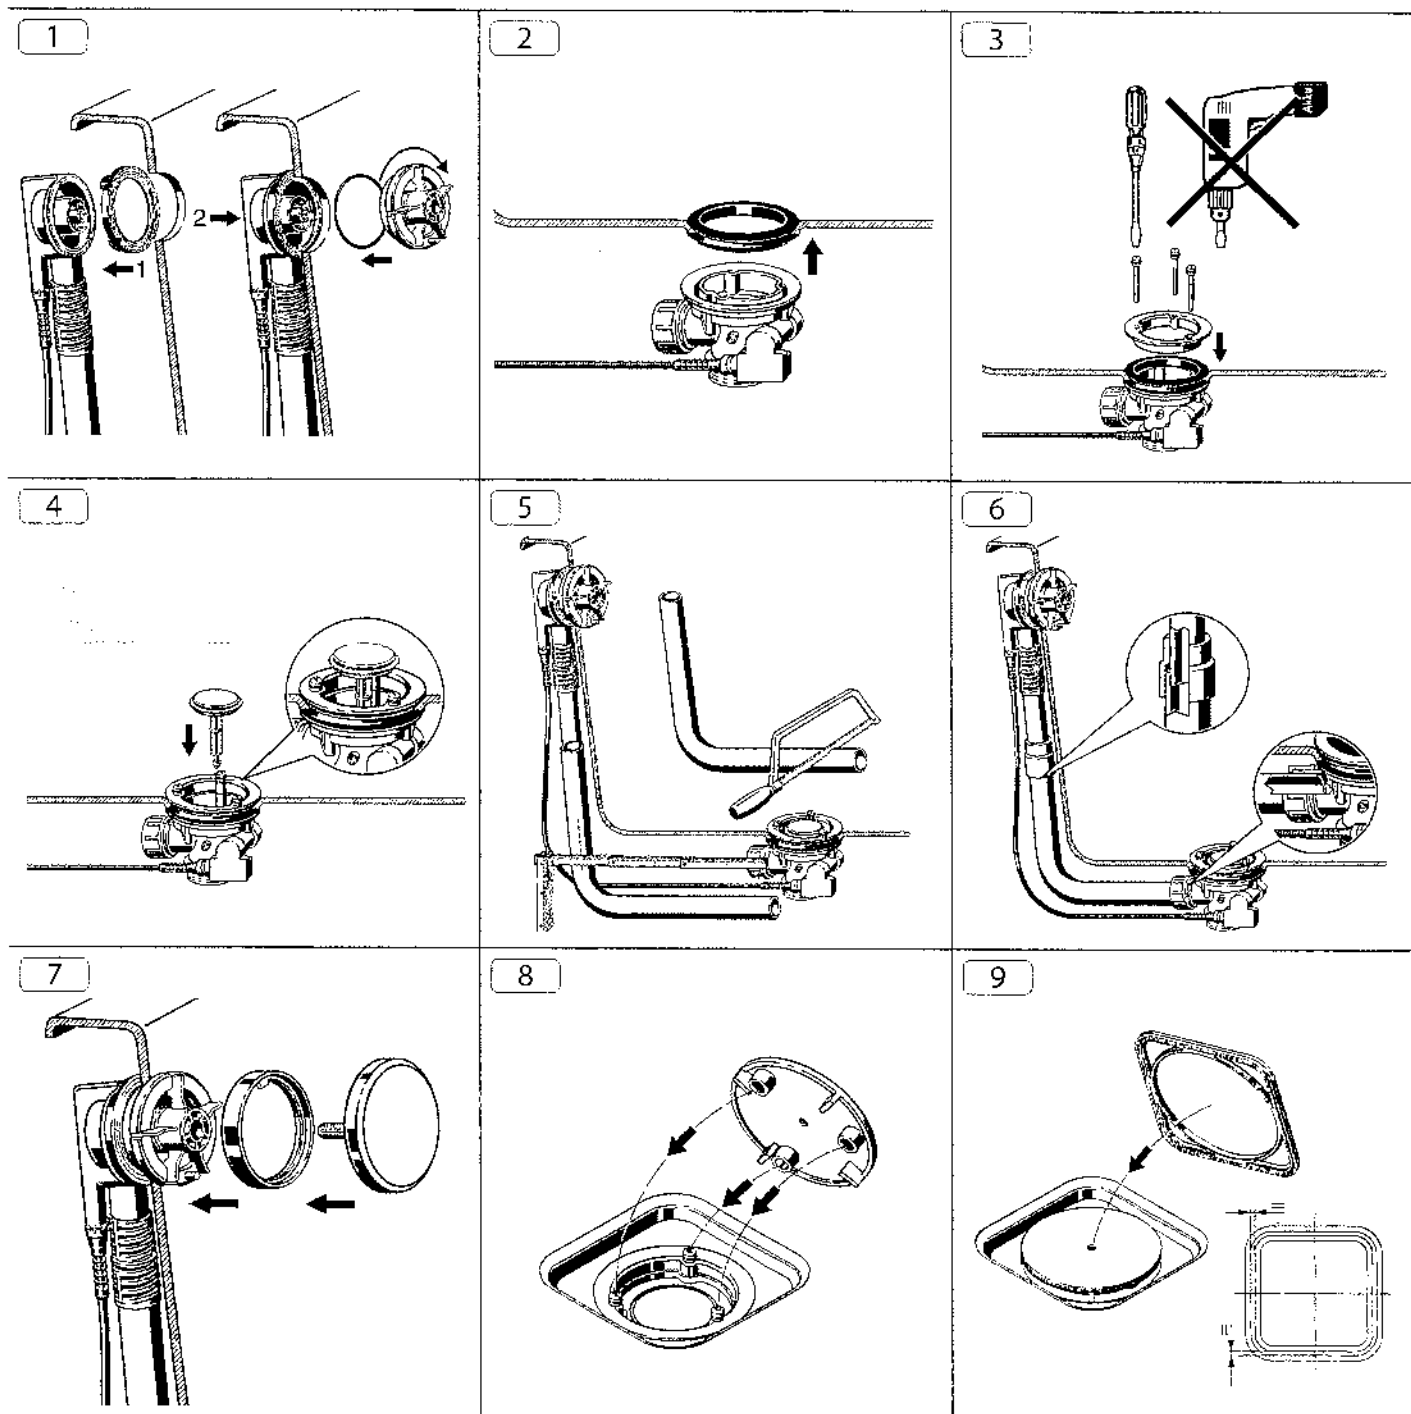


10

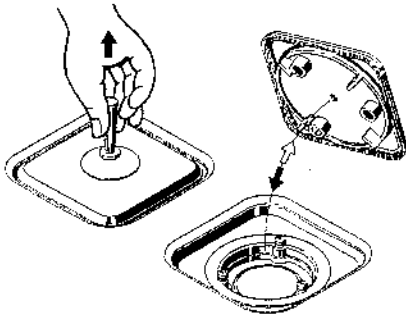

11

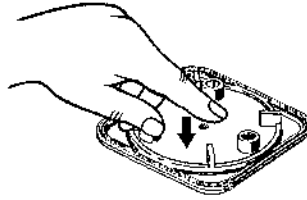

12

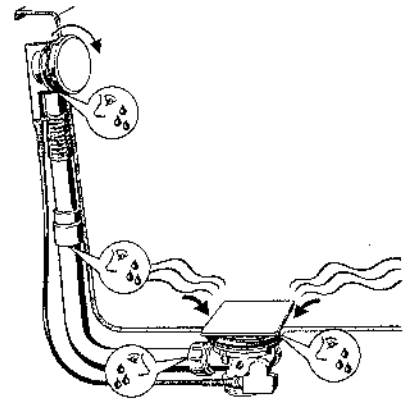

EINBAUANLEITUNG / INSTALLATION INSTRUCTIONS AB- UND ÜBERLAUFGARNITUR MIT INTEGRIERTEM EINLAUF/ DRAIN AND OVERFLOW FITTINGS WITH INTEGRATED INLET MOD. KA 4081 AUSTRALIA

